

Jabra

Elite Active 75t



User manual

© 2020 GN Audio A/S. All rights reserved. Jabra® is a trademark of GN Audio A/S. The Bluetooth® word mark and logos are registered trademarks owned by the Bluetooth SIG, Inc. and any use of such marks by GN Audio A/S is under license.

MADE IN CHINA

MODEL:

Earbuds: OTE120L, OTE120R

Charging case: CPB120

Wireless charging case: CPB125



Declaration of Conformity can be found on
www.jabra.com/doc

1. Welcome.....	5
2. Jabra Elite Active 75t overview.	6
2.1 Included accessories	
3. How to wear.....	8
3.1 Changing EarGels	
4. How to charge.....	10
4.1 Charging the earbuds	
4.2 Fast charge the earbuds	
4.3 Charging the charging case using USB	
4.4 Charging the charging case using a wireless charging pad	
5. What the LEDs mean	14
6. How to pair.....	16
6.1 Pairing with a mobile device	
7. How to use	17
7.1 Power the earbuds off/on	
7.2 Music controls	
7.3 Call controls	
7.4 ANC, HearThrough and Voice assistant controls	
7.5 Active Noise Cancellation (ANC)	
7.6 HearThrough	
7.7 Sidetone	
7.8 Mono earbud use	
7.9 Auto-pause music	

7.10	Sleep mode	
7.11	MyControls	
7.12	Multiple call handling	
7.13	Multi-connect	
7.14	Voice guidance and languages	
7.15	Voice assistant	
7.16	Update firmware	
7.17	Reset the earbuds	
8.	Jabra Sound+ app.....	31
9.	Support	32
9.1	FAQ	
9.2	How to care for your earbuds	
9.3	Replacement accessories	
9.4	Using the replacement earbuds	
9.5	Using a replacement charging case	

1. Welcome

Thank you for using the Jabra Elite Active 75t. We hope you will enjoy it!


Jabra Elite Active 75t features

- **Active Noise Cancellation (ANC).** Reduces background noise, so you can focus on your music with no distractions*
- **Compact comfort.** New, smaller design. Tested for secure fit.
- **Great calls, anywhere.** 4-microphone technology for great call quality.
- **More power, more freedom.** Up to 5.5 hours in the earbuds and in total 24 hours with the compact charging case (ANC on). Up to 7.5 hours in the earbuds and in total 28 hours with the compact charging case (ANC off).
- **Your music your way.** Make sure your music always sounds exactly how you like it with a customizable equalizer, available in the Jabra Sound+ app.
- **Proven connectivity.** Proven true wireless connection with no audio dropouts.
- **Durability, guaranteed.** IP55 rated earbuds and 2 year warranty against failure from dust and water with Jabra Sound+ app registration.
- **Easy access to your voice assistant.** One-touch access to Siri®, and Google Assistant™


*Download the Jabra Sound+ app to enable ANC. ANC applies to music and media playback (not for calls).

2. Jabra Elite Active 75t overview

Jabra Elite Active 75t earbuds

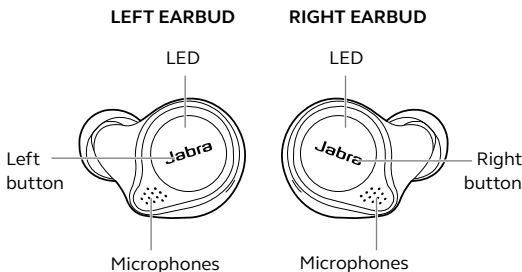

On-the-go charging case

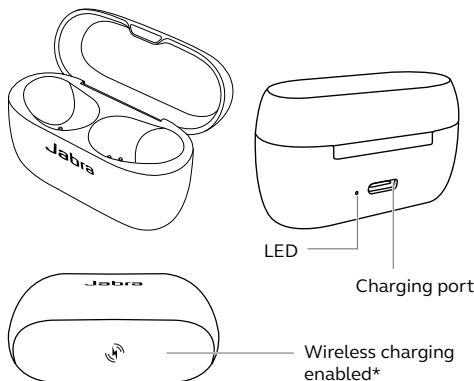

*Wireless charging variant only

2.1 Included accessories

EarGels

S



M

 


pre-mounted on
the earbuds


L




USB-A to USB-C charging cable




3. How to wear

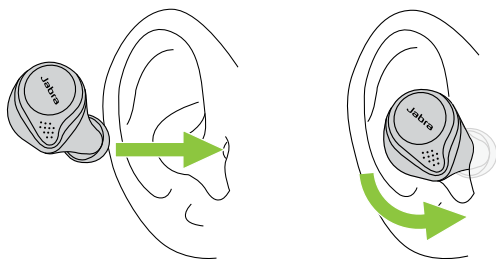

Insert the earbud into your ear and rotate to fit comfortably. Ensure the microphones are pointed towards your mouth.

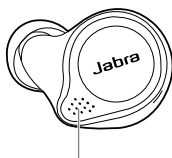



Microphones

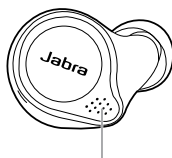

Microphones

3.1 Changing EarGels

For the optimal audio and ANC experience, it is recommended to try each of the different EarGel sizes. The fit should feel tight and secure in your ear. The medium EarGel is pre-mounted on the earbuds. Ensure the EarGel is firmly attached.

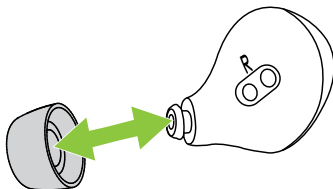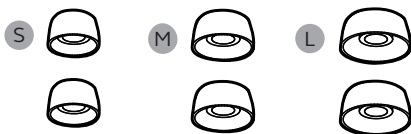


4. How to charge

Get up to 5.5 hours on a single charge with ANC on, with a total charge of up to 24 hours with the charging case. If you use the earbuds without ANC and HearThrough, you'll get even more battery, with up to 7.5 hours in the earbuds and a total of 28 hours with the charging case.

4.1 Charging the earbuds

Place the earbuds in the charging case and close the lid. It takes approx. 2 hours to fully recharge the earbuds.

When the charging case is opened, the LEDs on the earbuds will flash red, yellow or green to indicate the battery status of the earbuds. The LED on the back of the charging case indicates the battery status of the charging case.

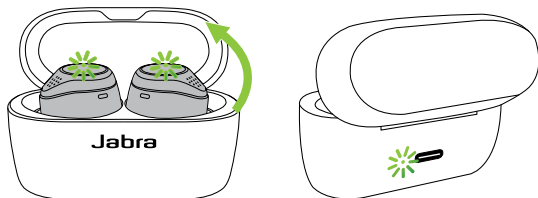

4.2 Fast charge the earbuds

When the earbuds are at low battery, placing them in the charging case for 15 minutes will fast charge the earbuds and give up to 60 minutes of battery. Fast charging the earbuds requires that the charging case is fully charged.


You can see the current battery status of the earbuds and charging case using the Jabra Sound+ app.

4.3 Charging the charging case using USB

Plug the supplied USB-A to USB-C charging cable into the charging case and a USB-A power supply or certified wall charger. It takes approx. 2 hours and 20 minutes to fully charge the earbuds and the charging case.

The charging case uses the standard USB voltage of 5v \pm 0.25v. It is not recommended to charge the earbuds using a power supply with a higher voltage.


Note: Third-party chargers may take longer to charge the charging case.

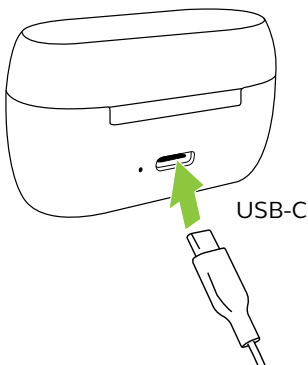

4.4 Charging the charging case using a wireless charging pad

If you own the wireless charging variant of the Jabra Elite Active 75t, a wireless charging pad* can be used to charge the charging case.


Place the charging case on a wireless charging pad. The LED on the charging case will flash to indicate the charging case is placed correctly. It takes up to 6 hours to fully charge the earbuds and the charging case.

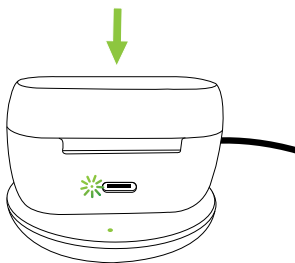





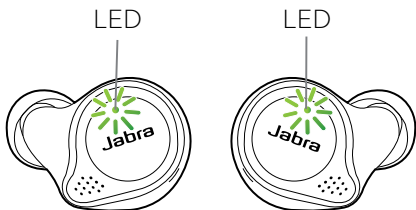

Because wireless charging pads take longer to fully charge a device, this may result in the device becoming warm. The elevated temperature is within safe operating requirements and has no bearing on the lifespan or performance of the device.


*A wireless charging pad is not supplied with this product

5. What the LEDs mean




EARBUD STATUS

- | | |
|---|---|
|  High battery/Power on |  Power off |
|  Medium battery |  Pairing |
|  Low battery |  Resetting |

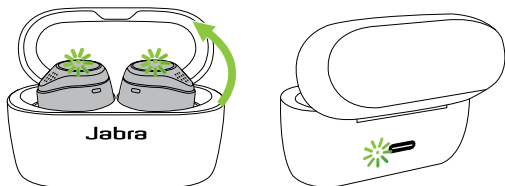





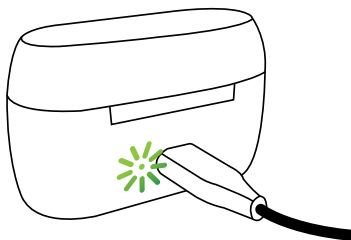


BATTERY STATUS WHEN OPENING CHARGING CASE

- | | |
|--|---|
|  High battery |  Low battery |
|  Medium battery | |





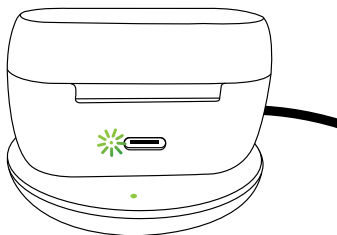


CHARGING STATUS WITH USB CABLE

- | | |
|--|--|
|  High battery |  Firmware updating |
|  Medium battery |  Firmware update error (see Section 7.16) |
|  Low battery | |
|  Fully charged | |




CHARGING STATUS WITH WIRELESS CHARGING PAD*

- | | |
|--|--|
|  High battery |  Firmware updating |
|  Medium battery |  Firmware update error (see Section 7.16) |
|  Low battery | |


6. How to pair

6.1 Pairing with a mobile device

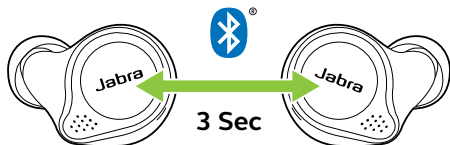

1. Remove the earbuds from the charging case to power them on. Alternatively, press and hold the **Left** and **Right** buttons (1 sec) simultaneously to power them on.
2. Press and hold (3 sec) the **Left** and **Right** buttons on the earbuds simultaneously until the right earbud LED flashes blue. The earbuds are now ready to pair to your phone.
3. Wear the earbuds and follow the voice-guided pairing instructions to pair to your mobile device.

7. How to use

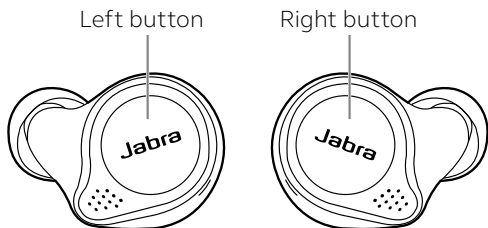


7.1 Power the earbuds off/on

Place the earbuds in the charging case to power them off, or remove them from the charging case to power them on.

Alternatively, the earbuds can be manually powered off by pressing the **Left** and **Right** buttons on the earbuds simultaneously. To power on, press and hold (1 sec) the **Left** and **Right** buttons simultaneously.

 
7.2 Music controls



Left earbud	Function	Right earbud
	Play/pause music	Press the Right button when not on a call
	Volume up	Press and hold the Right button
Press and hold the Left button	Volume down	
Double-press the Left button when listening to music	Next track	
Triple-press the Left button when listening to music	Restart track or previous track	
Repeat to skip to the previous track		

All button functions can be reassigned using MyControls in the Jabra Sound+ app.

 
7.3 Call controls



Left earbud	Function	Right earbud
	Answer/end call	Press the Right button
	Reject call	Double-press the Right button
	Hold/resume call	Double-press the Right button
Press the Left button when on a call	Mute/unmute microphone	
Double-press the Left button when on a call	Sidetone on/off	
	Volume up	Press and hold the Right button
Press and hold the Left button	Volume down	

All button functions can be reassigned using MyControls in the Jabra Sound+ app.

 7.4 ANC, HearThrough and Voice assistant controls



Left earbud	Function	Right earbud
Press the Left button when not on a call	Cycle between HearThrough, ANC*, Off	
	Activate Voice assistant (Siri, Google Assistant)	Double-press the Right button when not on a call

All button functions can be reassigned using MyControls in the Jabra Sound+ app.

*Requires latest firmware version

7.5 Active Noise Cancellation (ANC)

Advanced Active Noise Cancellation (ANC) counters noise by detecting and analyzing the pattern of incoming sound, and then generating an anti-noise signal to cancel noise out. As a result, you experience a reduced level of surrounding noise** during music and media playback.

Left button

ANC



Cycle between
HearThrough,
ANC*, off

Press the **Left**
button when not on
a call

*Requires latest firmware version

**Low frequency noise, such as the rumble of a train
or noisy air conditioning

7.6 HearThrough

HearThrough lets you pay attention to your surroundings and engage in conversation, when not on a call, without needing to remove the earbuds. The microphones pick up surrounding sounds and transmit them to the speakers.

Left button


HearThrough



Cycle between
HearThrough,
ANC, off


Press the **Left**
button when not on
a call

HearThrough levels can be adjusted using the Jabra Sound+ app.

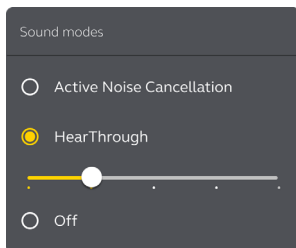


7.7 Sidetone

Sidetone enables you to hear your own voice when you are on a call. The benefit of Sidetone is that it enables you to determine how loud you are speaking.

Left button	Sidetone
	<p>Turn Sidetone on/off</p> <p>Double-press the Left button when on a call</p>

Sidetone is on by default during calls and can be turned on/off using the Jabra Sound+ app.

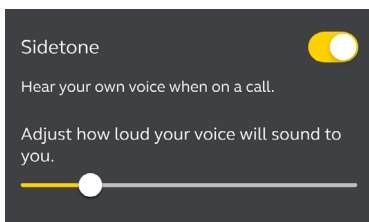

7.8 Mono earbud use

The right earbud can be used individually for mono music playback or for calls. When used as a mono earbud, the right earbud retains its current button functionality.

To use the right earbud as a mono earbud, place it in your ear and place the left earbud in the charging case. You may need to tap the button on the right earbud to activate mono earbud use.

Right button

Mono earbud use

Answer/end call

Press the **Right** button

Reject call

Double-press the **Right** button when there is an incoming call

Play/pause music

Press the **Right** button when listening to music



Activate Voice assistant (Siri, Google Assistant)

Double-press the **Right** button when not on a call

Adjust volume


Use the volume controls on the paired mobile device

The earbuds will automatically relink when you place both of them in your ears.

7.9 Auto-pause music

When an earbud is removed from your ear while listening to music, the music will automatically pause.

To unpause the music, return the earbud to your ear within 60 seconds. After 60 seconds, the music can be unpaused by pressing the **Right** button.

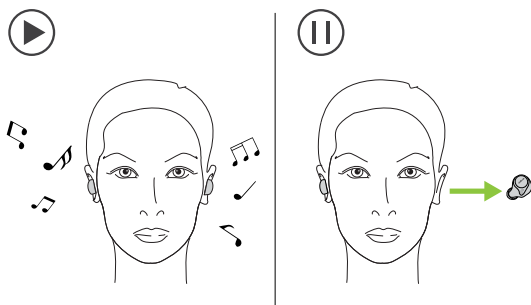


Auto-pause music settings can be disabled or configured using the Jabra Sound+ app.

7.10 Sleep mode

To conserve battery, the earbuds will automatically power off when they are out of range of your mobile device for 15 minutes and are not in the charging case, or when they have been inactive for 30 minutes.

To power the earbuds on, press and hold (1 sec) the **Left** and **Right** buttons simultaneously. Alternatively, place them in the charging case and then take them back out.

Sleep mode can be configured in the Jabra Sound+ app.

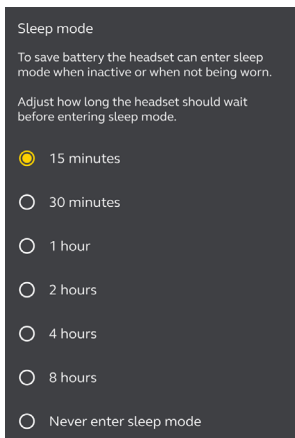


7.11 MyControls

MyControls is a feature in the Jabra Sound+ app that enables you to reassign any function to each of the earbud buttons, offering you the flexibility to configure the earbuds precisely to your personal preference.

7.12 Multiple call handling

The earbuds can accept and handle multiple calls at the same time.

Right earbud	Multiple call handling	
	End current call and answer incoming call	Press the Right button
	Put current call on hold and answer incoming call	Triple-press the Right button
	Switch between held call and active call	Double-press the Right button
	Reject incoming call, when on a call	Double-press the Right button

7.13 Multi-connect

The earbuds can be paired to two mobile devices at once, and can accept incoming calls from either mobile device.

To pair to two mobile devices, use the normal pairing process separately for each mobile device (refer to section 5). After pairing to both mobile devices, you will need to select the Jabra Elite Active 75t again on the first mobile device in the Bluetooth settings to complete the pairing to both mobile devices.

Note: Only one of the mobile devices will have an active audio channel, and voice assistant will be activated on the last paired mobile device.

7.14 Voice guidance and languages

Voice guidance can be turned on/off and the language can be changed using the Jabra Sound+ app.

The following languages are available: English, French, German, Japanese, Mandarin Chinese, Korean.

7.15 Voice assistant

Right button

Voice assistant



Activate
Siri, Google
Assistant

Double-press the **Right**
button when not on
a call

Voice assistant settings can be configured using the Jabra Sound+ app.

7.16 Update firmware

The Jabra Elite Active 75t can be updated to the latest firmware version using the latest version of the Jabra Sound+ app.

If notifications are enabled in the Jabra Sound+ app, you will receive an automatic notification when a firmware update is available.

After a firmware update, if the LED on the charging case flashes red, this indicates that the charging case was not updated correctly. To complete the firmware update correctly, connect the charging case to a power supply, remove the earbuds from the charging case, place the earbuds back in the charging case, and then close the lid for 5 seconds. This will complete the firmware update.

7.17 Reset the earbuds

Resetting the earbuds clears the list of paired devices and resets all settings, except for ANC personalization settings.

1. Place both earbuds in the charging case.
2. Press and hold (10 sec) the **Left** and **Right** buttons on the earbuds simultaneously until the LEDs on the earbuds flash purple.
3. Close the lid of the charging case for 5 seconds to complete the reset.

The earbuds will need to be re-paired to your mobile device. Remember to delete/forget the pairing in the Bluetooth menu on your mobile device.

8. Jabra Sound+ app



Jabra Sound+ app*



Personalize your music
with MySound



Customize ANC, HearThrough
and MyControls



Register your
2-year warranty



*The Jabra Sound+ app and any screenshots in this user manual are subject to change

9. Support

9.1 FAQ

View the FAQs on Jabra.com/help/eliteactive75t


9.2 How to care for your earbuds

- Always store the earbuds in the charging case and safely protected.
- To prevent the depletion of the battery lifetime or capacity, avoid storing the earbuds in hot or cold environments, such as a closed car in summer, or in winter conditions.
- It is recommended to keep the earbuds between 15°C and 25°C (59°F and 77°F).
- Do not store the earbuds for extended periods of time without recharging them (max. three months).
- If the earbuds or the charging case become dirty, it is recommended to clean them with a soft, lint-free cloth that has been dampened with clean water.
- To prevent charging issues, keep the charging contact points on the earbuds clean.
- The charging case uses the standard USB voltage of 5v +- 0.25v. It is not recommended to charge the earbuds using a power supplier with a higher voltage.


9.3 Replacement accessories

Replacement or additional accessories can be purchased online at jabra.com/accessories.


Left and right earbud set

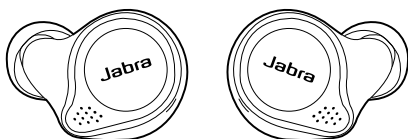


Charging case

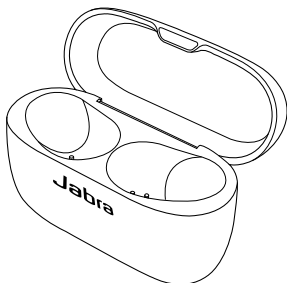

EarGels

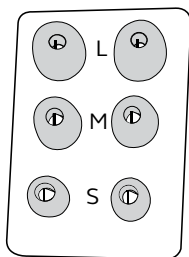

USB charging cables

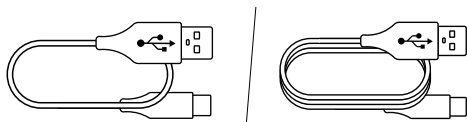

9.4 Using the replacement earbuds

1. Place the replacement earbuds into the charging case and close the lid.
2. Open the charging case lid and remove the earbuds.
3. Wear the earbuds and follow the voice instructions to pair to your mobile device.
4. Update the earbud firmware using the Jabra Sound+ app.

9.5 Using a replacement charging case

Before using a replacement charging case for the first time, it will need to be synced with your current earbuds and charged for 1 hour.

To begin syncing, place your current earbuds inside the replacement charging case, and close the lid. The LED on the charging case may flash purple to indicate that the firmware is being updated. Please wait until the LED stops flashing purple before opening the charging case.