

# Canon

# SELPHY SQUARE QX10

COMPACT PHOTO PRINTER



CT0-B466

使用説明書

使用说明书

使用説明書

사용 설명서

Getting Started

Příručka Začínáme

Startvejledning

Handbuch Erste Schritte

Guía de inicio

Guide de mise en route

Guida introduttiva

Kezdeti lépések

Introductiehandleiding

Pierwsze kroki

Guia de Introdução

Aloitusopas

Starthandbok

Başlangıç Kılavuzu

Ինչպես սեկնարկել

Қысқаша нұсқаулық

Ишти баштоо

Начало работы

Посібник із початку роботи

دليل بدء التشغيل

日本語

简体中文

繁體中文

한국어

ENGLISH

ČESKY

DANSK

DEUTSCH

ESPAÑOL

FRANÇAIS

ITALIANO

MAGYAR

NEDERLANDS

POLSKI

PORTUGUÊS

SUOMI

SVENSKA

TÜRKÇE

ՀԱՅԵՐԵՆ

ҚАЗАҚША

КЫРГЫЗЧА

РУССКИЙ

УКРАЇНСЬКА

العربية

EAC



# Canon

## SELPHY SQUARE QX10

COMPACT PHOTO PRINTER

# Getting Started

### ENGLISH

- Make sure you read this guide, including the “Safety Instructions” (📖2) section, before using the printer.
- Reading this guide will help you learn to use the printer properly.
- Store this guide safely so that you can use it in the future.



## Safety Instructions

- Be sure to read these instructions in order to operate the product safely.
- Follow these instructions to prevent injury or harm to the operator of the product or others.

### WARNING

Denotes the risk of serious injury or death.

- Use only power sources specified in this instruction manual for use with the product.
- Do not disassemble or modify the product.
- Do not expose the product to strong shocks or vibration.
- Do not touch any exposed internal parts.
- Stop using the product in any case of unusual circumstances such as the presence of smoke or a strange smell.
- Do not use organic solvents such as alcohol, benzine or paint thinner to clean the product.
- Do not get the product wet. Do not insert foreign objects or liquids into the product.
- Do not use the product where flammable gases may be present. This may cause electric shock, explosion or fire.
- Do not touch the product connected to a power outlet during lightning storms. This may cause electric shock.
- Periodically remove any dust buildup from the power plug and power outlet using a dry cloth.
- Do not plug in or unplug the product with wet hands.
- Do not use the product if the power plug is not fully inserted into the power outlet.
- Do not expose the power plug and terminals to dirt or let them come into contact with metallic pins or other metal objects.
- Do not place heavy objects on the power cord. Do not damage, break or modify the power cord.
- Do not wrap the product in cloth or other materials when in use or shortly after use when the product is still warm in temperature.
- Do not leave the product connected to a power source for long periods of time.
- Do not charge the product at temperatures outside the range of 5-40 °C (41 – 104 °F).

This may cause electric shock, explosion or fire.

- Follow any indications to turn off the product in places where its use is forbidden.

Not doing so may cause other equipment to malfunction due to the effect of electromagnetic waves and even result in accidents.



### CAUTION

Denotes the risk of injury.

- Do not touch any parts inside the product. This may cause injury.

## Before Use

 
- Images printed with this product are to be used for personal enjoyment. Unauthorized printing of copyrighted material is prohibited.
- The printer warranty is valid only in the country or area of purchase. In case of printer problems while abroad, return to the area of purchase before contacting a Customer Support Help Desk.

## Package Contents

- SELPHY SQUARE QX10
- Charging Cable
- Sample Ink Cassette
- Sample Sticker Paper
- Printed matter is also included.
- Purchase a Color Ink / Label Set (XS-20L) separately.
- The accessory charging cable is a charging only cable, and cannot be used for communication.



## Names of Parts

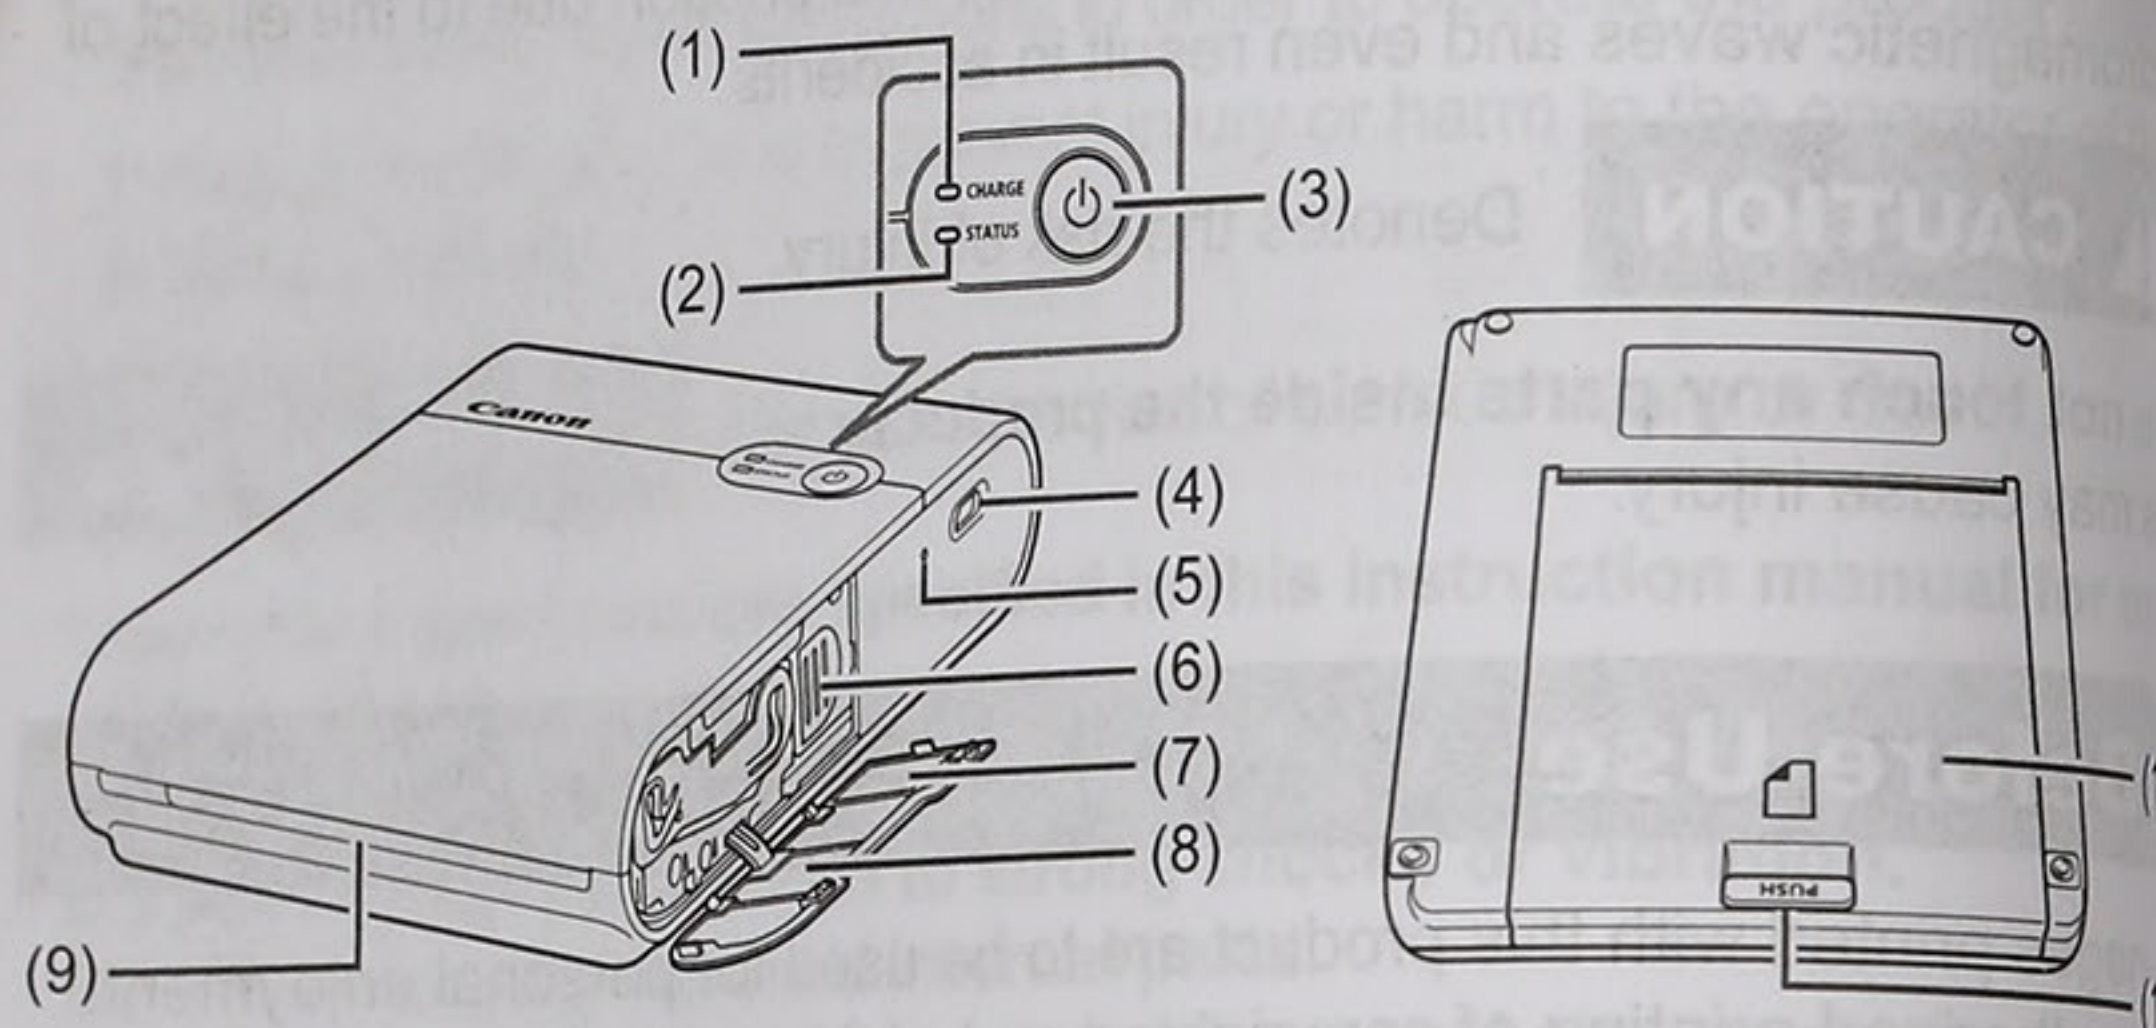


- |                            |                                    |
|----------------------------|------------------------------------|
| (1) CHARGE lamp            | (7) QR code label                  |
| (2) STATUS lamp            | (8) Ink cassette compartment cover |
| (3) Power button           | (9) Delivery outlet                |
| (4) Charging terminal      | (10) Paper compartment cover       |
| (5) Forced shutdown switch | (11) Open button                   |
| (6) Eject lever            |                                    |

- ! Place the printer on a table or other flat, stable surface. Never place the printer on an unstable or tilted surface.
- Do not place objects in front of the delivery outlet that may interfere with the paper during printing.
  - The QR code label is needed when you register the printer again, such as when you change your model of smartphone. Take a photo of the QR code with the camera function of your smartphone, etc. and store it carefully.



 - If the ink sheet is loose, turn the sprocket gently to tighten it. Do not touch the ink sheet.

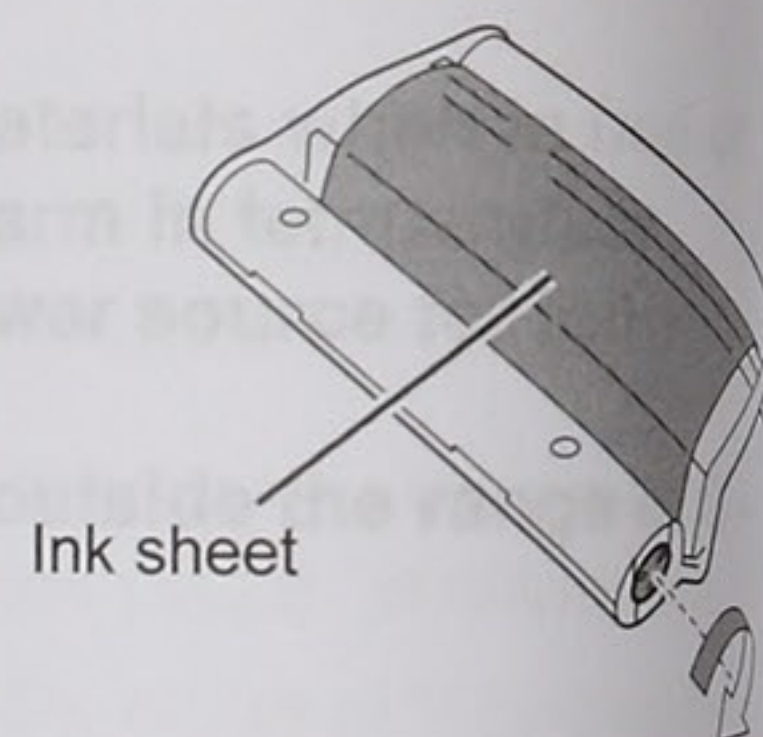

## Lamp indications

STATUS lamp	CHARGE lamp	Status
Off	Off	Power off (Not charged)
	Blinks slowly green	Charging in progress (Power off)
	Lights green	Charging complete (Power off)*1
Blinks slowly white	Off	Printer start-up in progress
Blinks white	Off	Processing...
Blinks quickly white	Off	Remove the printed paper.
Lights white	Off	Standing by to print (Not charged)*2
	Blinks green	Standing by to print (Battery level low)
	Blinks slowly green	Standing by to print (Charging in progress)
	Lights green	Standing by to print (Charging complete)
Blinks slowly red	Blinks slowly green	Outside the operating temperature range so charging has paused.
Blinks red	Off	An error occurred. Check the app message.
	Blinks green	The battery level is low so printing is not possible. Charge the battery.
Blinks quickly red	Off	An error occurred. Turn the power off and then on again.
	Blinks quickly green	A battery error occurred.

\*1 After a while, the CHARGE lamp turns off.

\*2 You can check the battery level by pressing the Power button in the Standing by to print (Not charged) status.

- CHARGE lamp blinks two times:

The battery level is low, but the printer can still be used.

 
- CHARGE lamp blinks three times:

The battery level is sufficient.



## Preparations

### Charging the battery

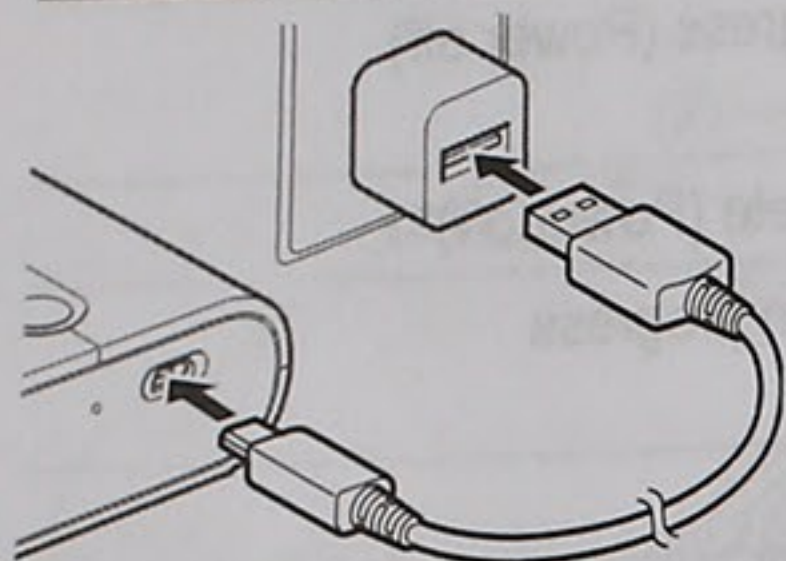

- 1 **Connect the printer and the charging USB AC adapter (sold separately) with the accessory charging cable.**

- The CHARGE lamp begins to blink green and charging starts. When the CHARGE lamp lights up green, charging is complete.

### Installing the app

The smartphone application SELPHY Photo Layout is needed to print with this product.

- 1 **Download and install the latest version of SELPHY Photo Layout.**

- Search for "SELPHY Photo Layout" from the App Store (in case of an iPhone, iPad) or Google Play (in case of an Android smartphone), and install SELPHY Photo Layout.

- 2 **Start SELPHY Photo Layout.**

- Turn on location services on the smartphone.
- Turn off power saving mode and other functions that reduce smartphone battery consumption.
- Follow the on-screen instructions.



- For information on how to operate the printer, such as loading the paper or replacing the ink cassette, refer to [Printer Manual] of SELPHY Photo Layout.

## Printing Precautions

- Set the paper with the printing surface (the surface without the Canon logo) facing downward, being careful not to touch the printing surface.
- Do not use paper that has already been printed on or that has written text or other markings.
- The paper extends from the delivery outlet multiple times during printing. Do not pull on the paper until the message indicating to remove the paper is displayed on the smartphone.
- Do not interrupt communication until printing is finished. If communication is interrupted, printing may be performed only partway.
- Do not open the ink cassette compartment cover or the paper compartment cover while the printer is operating.
- If the Standing by to print status continues for approximately 10 minutes, the power will automatically turn off. To resume printing, press the Power button.



## Specifications

Dimensions	Approx. 102.2 × 143.3 × 31.0 mm (4.02 × 5.65 × 1.23 in.) (Excluding protrusions)
Weight	Approx. 445 g (15.70 oz.) (printer body only)
Operating temperature	5 °C - 40 °C (41 - 104 °F)
Operating humidity	20 - 80%
Rated input	DC 5.0 V ±0.5 V, max. 900 mA
Printing method	Dye-sublimation thermal transfer (with overcoating)
Resolution	287 × 287 dpi
Gradation	256 shades per color
Paper tray capacity	10 sheets
Paper size	Approx. 72.0 × 85.0 mm (2.84 × 3.35 in.)
Printing range	Selectable by the app from approx. 68 x 68 mm (2.7 x 2.7 in.), approx. 65 x 65 mm (2.6 x 2.6 in.), or approx. 62 x 62 mm (2.4 x 2.4 in.)
Printable number of sheets	Approx. 20 sheets (room temperature, battery fully charged)
Printing speed (per sheet)	Approx. 43 seconds (room temperature)
<ul style="list-style-type: none"> <li>• Adapter and charging time Use a charger with rated power output of DC 5.0 V, 1000 mA or more to charge the product. Charging takes approximately 2 hours at room temperature, but this time may increase depending on the condition of the battery used and the charging environment.</li> <li>• All data is based on tests by Canon.</li> <li>• Printer specifications or appearance are subject to change without notice.</li> </ul>	

## Wi-Fi (Wireless LAN) Precautions

- This product is embedded with a wireless device. The model number is CD1158 (including WLAN module model WM321).
- Countries and Regions Permitting WLAN Use  
Use of WLAN is restricted in some countries and regions, and illegal use may be punishable under national or local regulations. To avoid violating WLAN regulations, visit the Canon website to check where use is allowed.  
Note that Canon cannot be held liable for any problems arising from WLAN use in other countries and regions.
- Doing any of the following may incur legal penalties:  
Altering or modifying the product  
Removing the certification labels from the product
- Do not use the wireless LAN function of this product near medical equipment or other electronic equipment.  
Use of the wireless LAN function near medical equipment or other electronic equipment may affect operation of those devices.

Use of genuine Canon accessories is recommended.

This product is designed to achieve excellent performance when used with genuine Canon accessories. Canon shall not be liable for any damage to the product and/or accidents such as fire, etc., caused by the malfunction of non-genuine Canon accessories (e.g., a leakage and/or explosion of a battery pack). Please note that this warranty does not apply to repairs arising out of the malfunction of non-genuine Canon accessories, although you may request such repairs on a chargeable basis.



## Radio Wave Interference Precautions

This product may receive interference from other devices that emit radio waves.

To avoid interference, be sure to use this product as far away as possible from such devices, or avoid using the devices at the same time as this product.

Hereby, Canon Inc. declares that this equipment is in compliance with Directive 2014/53/EU.

The full text of the EU declaration of conformity is available at the following Internet address:

<http://www.canon-europe.com/ce-documentation>

Wireless LAN Specifications

Frequency band(s): 2401 MHz - 2473 MHz

Maximum radio-frequency power: 11.4 dBm

**CANON EUROPA N.V.**

Bovenkerkerweg 59, 1185 XB Amstelveen, The Netherlands

**CANON INC.**

30-2, Shimomaruko 3-chome, Ohta-ku, Tokyo 146-8501, Japan

Complies with  
IMDA Standards  
DB00671

## Security Precautions

Because Wi-Fi uses radio waves to transmit signals, security precautions more stringent than when using a LAN cable are required. Keep the following points in mind when using Wi-Fi.

- **Transmission monitoring**  
Third parties with malicious intent may monitor Wi-Fi transmissions and attempt to acquire the data you are sending.
- **Unauthorized network access**  
Third parties with malicious intent may use this product illegally if they are able to view the information contained in the QR code.  
It is recommended to use the smartphone application SELPHY Photo Layout to change the network password as necessary.

## Precautions before Repair, Disposal, or Transfer of Ownership

Before transferring ownership, disposing of the product, or sending it for repair, do the following to initialize the settings.

- Turn on the power. → Press and hold the Power button. After 1 second, the STATUS lamp turns off. → Continue pressing the Power button. → When the STATUS lamp begins to blink, release the Power button.

## Use of genuine Canon accessories is recommended

This product is designed to achieve excellent performance when used with genuine Canon accessories.

Canon shall not be liable for any damage to this product and/or accidents such as fire, etc., caused by the malfunction of non-genuine Canon accessories (e.g., a leakage and/or explosion of a battery pack). Please note that this warranty does not apply to repairs arising out of the malfunction of non-genuine Canon accessories, although you may request such repairs on a chargeable basis.



## CAUTION

DISPOSE OF USED BATTERIES ACCORDING TO LOCAL REGULATIONS.

### -India only-

This product is not to be disposed of with your household waste, according to the E-Waste (Management) Rules, 2016. This product should be handed over to a designated collection point, e.g., to an authorized collection site for recycling waste electrical and electronic equipment (EEE). Improper handling of this type of waste could have a possible negative impact on the environment and human health due to potentially hazardous substances that are generally associated with EEE. At the same time, your cooperation in the correct disposal of this product will contribute to the effective usage of natural resources. For more information regarding return and recycling of WEEE products, please visit <http://www.canon.co.in/environment> or write to us at [customer.delight@canon.co.in](mailto:customer.delight@canon.co.in).

Also, this product complies with the "E-Waste (Management) Rules, 2016" and prohibits use of lead, mercury, hexavalent chromium, polybrominated biphenyls or polybrominated diphenyl ethers in concentrations exceeding 0.1 % by weight and 0.01 % by weight for Cadmium, except for the exemptions set in Schedule II of the Rule.

--- Direct current



Stand-by

## FCC Notice

(Printer, Model CD1158 Systems)

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The cable with the ferrite core provided with the printer must be used with this equipment in order to comply with Class B limits in Subpart B of Part 15 of the FCC rules.

Do not make any changes or modifications to the equipment unless otherwise specified in the manual. If such changes or modifications should be made, you could be required to stop operation of the equipment.

### Canon U.S.A., Inc.

One Canon Park, Melville, New York 11747, U.S.A.

Tel No. 1-800-OK-CANON (1-800-652-2666)



## FCC/IC Notice

Model: CD1158 (including WLAN Module Model WM321, FCC ID: AZD321 / IC: 498J-321)

This equipment complies with FCC/IC radiation exposure limits set forth for an uncontrolled environment and meets the FCC radio frequency (RF) Exposure Guidelines and RSS-102 of the IC radio frequency (RF) Exposure rules. This equipment should be installed and operated keeping the radiator at least 20cm or more away from person's body.

This device complies with Part 15 of FCC Rules and ISED's applicable licence-exempt RSSs. Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of this device.

This transmitter must not be co-located or operated in conjunction with any other antenna or transmitter.

## For CA, USA only

Included lithium battery contains Perchlorate Material - special handling may apply.

See [www.dtsc.ca.gov/hazardouswaste/perchlorate/](http://www.dtsc.ca.gov/hazardouswaste/perchlorate/) for details.

## Canadian Radio Interference Regulations

 
CAN ICES-3 (B)/NMB-3 (B)



### USA and Canada only:

The Lithium ion/polymer battery is recyclable. Please call 1-800-8-BATTERY for information on how to recycle this battery.

Only for European Union and EEA (Norway, Iceland and Liechtenstein)

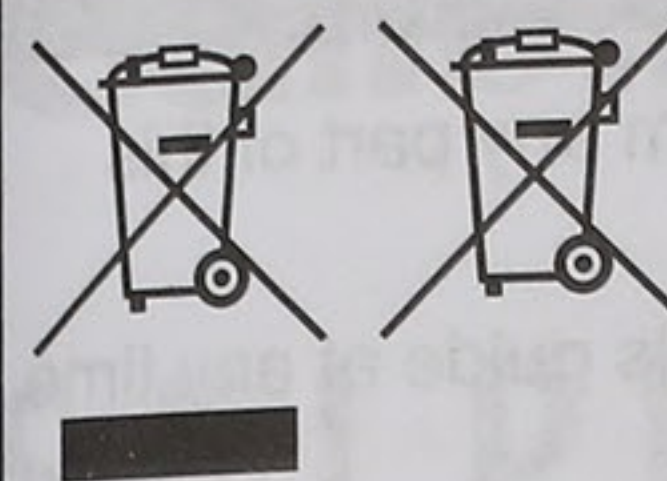

These symbols indicate that this product is not to be disposed of with your household waste, according to the WEEE Directive (2012/19/EU), the Battery Directive (2006/66/EC) and/or national legislation implementing those Directives.

If a chemical symbol is printed beneath the symbol shown above, in accordance with the Battery Directive, this indicates that a heavy metal (Hg = Mercury, Cd = Cadmium, Pb =

Lead) is present in this battery or accumulator at a concentration above an applicable threshold specified in the Battery Directive.

This product should be handed over to a designated collection point, e.g., on an authorized one-for-one basis when you buy a new similar product or to an authorized collection site for recycling waste electrical and electronic equipment (EEE) and batteries and accumulators. Improper handling of this type of waste could have a possible impact on the environment and human health due to potentially hazardous substances that are generally associated with EEE. Your cooperation in the correct disposal of this product will contribute to the effective usage of natural resources. For more information about the recycling of this product, please contact your local city office, waste authority, approved scheme or your household waste disposal service or visit [www.canon-europe.com/weee](http://www.canon-europe.com/weee), or [www.canon-europe.com/battery](http://www.canon-europe.com/battery).

## Trademarks

- App Store, iPhone and iPad are trademarks of Apple Inc., registered in the U.S. and other countries.
- Google Play and Android are trademarks of Google LLC.
- QR Code is a trademark of Denso Wave Inc.
- Wi-Fi®, Wi-Fi Alliance®, WPA™ and WPA2™ are trademarks or registered trademarks of the Wi-Fi Alliance.
- All other trademarks are the property of their respective owners.



## Disclaimer

- Reprinting, transmitting, or storing in a retrieval system any part of this guide without the permission of Canon is prohibited.
- Canon reserves the right to change the contents of this guide at any time without prior notice.
- Illustrations in this guide may differ slightly from the actual equipment.
- The above items notwithstanding, Canon accepts no liability for damages due to mistaken operation of the products.
- For information about third-party software, read "Third party software" at the end of this guide.