


MONSTER MS12109 Superstar Smarter Music Speaker S320 User Guide

 **MONSTER**®

SUPERSTAR™
THE SMARTER MUSIC SPEAKER | **S320**

Model No: MS12109

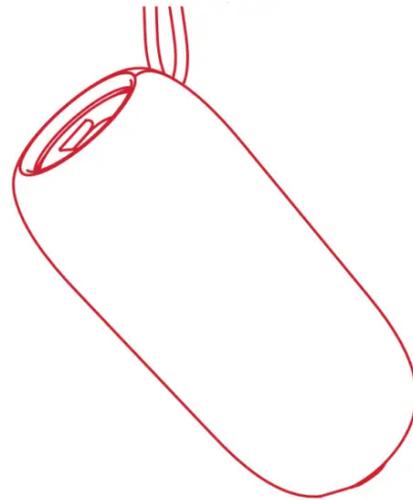

Quick Start Guide

Please read this Quick Start Guide carefully and keep it for future use.

[Contents hide](#)

[1 Product Overview](#)

[2 Power/Charging](#)

[3 Power On/Off](#)

[4 Volume Control](#)

[5 Voice Control](#)

[6 Power Saving Setting](#)


[7 Reset Paired Device List](#)

[8 Documents / Resources](#)

[9 Related Posts](#)

Product Overview

- Speaker Unit
- USB Charging Cable
- AUX IN Cable
- Quick Start Guide & Warranty Letter

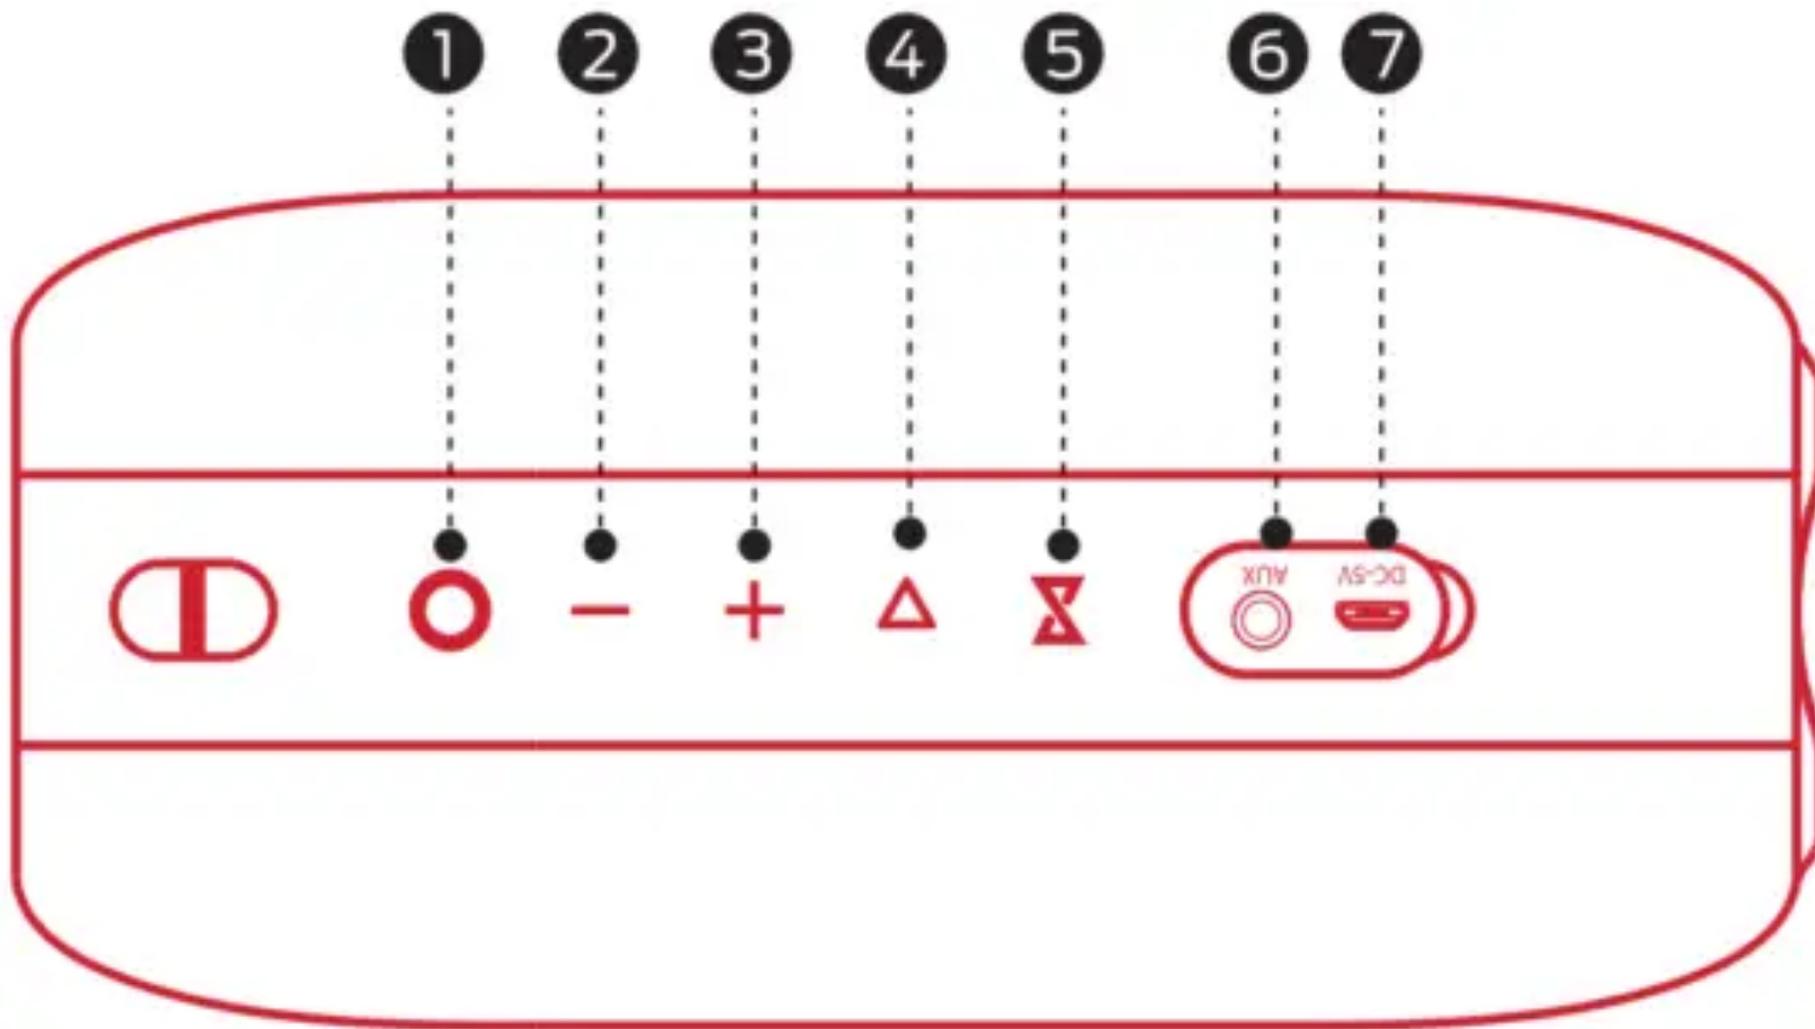

1. Power On/Off Button/Function Indicator
2. Volume “-” Button: volume down/track backward

3. Volume “+” Button: volume up/ track forward
4. Multi Function Button (MFB): pairing/call answer/end/reject /music play/pause
5. Stereo Connection Button/Indicator
6. AUX IN input port
7. USB Charging port/charging indicator

Power/Charging

For better enjoyment, fully charge the speaker before use. The USB cable included is for charging only (not for data transfer) that can be connected to your computer or another device with a USB port. Charging with a 5V power adapter rated 2A or above (not included).

Power On/Off

To power on, press and hold the Power On/Off Button for about 2 seconds, and a “power on” tone will be heard. To power off, press and hold the Power On/Off Button for about 2 seconds, a “power off” tone will be heard.

Pairing

- Power on the speaker for the first time, and it will enter pairing mode automatically.
- If the Bluetooth device is connected, press and hold the MFB for about 2 seconds to disconnect and be ready to pair another device.
- If the speaker is not connected to any Bluetooth device, it will enter pairing mode automatically. When pairing, enable the Bluetooth function of the mobile phone, and search for Monster devices for pairing and connection. After the connection is successful, you will hear a “connected” tone and the blue LED indicator will change from fast flashing to steady.

Volume Control

Short press the Volume Button “+” or “-” to turn the volume up or down.

Music

Play/Pause: Press the MFB to play/pause.

Next song: Press and hold the “+” button for 2 seconds.

Previous song: Press and hold the “-” button for 2 seconds.

Call

Answer call: Short press MFB.

Reject call: Press and hold the MFB for about 2 seconds.

End call: Short press MFB.

Voice Control

When the speaker is connected to the phone, double press the multi-function button to enable or disable the voice assistant.

Power Saving Setting

Power saving mode is activated when the speaker is turned on. It will turn off automatically in 15 minutes if it is not connected to any Bluetooth device.

Reset Paired Device List

Power off the speaker, and press and hold the power button for 10 seconds to reset the speaker to factory default.

Connect Two Speakers in Stereo Mode (same model only)

1. Turn on both speakers and do not connect to any Bluetooth device (such as a mobile phone).



2. Double press the “” button on one of the speakers, and you will hear a prompt tone, and the speakers will be automatically connected.
3. After the two speakers are successfully connected, the white LED indicator on each speaker will light up at the same time.

4. Enable the Bluetooth function of the mobile phone, and search for the “Monster” device for pairing and connection. After the connection is successful, you will hear a prompt tone, and the blue LED indicator will change from fast flashing to always on.

LED Indicator Guide

Status	Description	Tone
Power On	Function indicator Blue LED stays on for about 1 second	Power On Tone
Power Off	Function indicator: LED off	“Goodbye”
Pairing	Function indicator: Blue LED indicator flashes quickly	“Discovering”
Bluetooth connected	Function indicator: Blue LED indicator light is on	“Your device is connected”
connection succeeded	Stereo connection indicator light up	–
Battery low	–	“Battery low”
Charging	Charging indicator: Red LED lights when charging, turns off after fully charged	–

Caution

- Fully charge before use.
- Self-replacement of the battery is prohibited.
- Do not expose the battery (battery pack or battery pack combination) to direct sunlight, fire, or high temperatures.

FCC Statement

Changes or modifications not expressly approved by the party responsible for compliance could void the user’s authority to operate the equipment. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment

generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. The device has been evaluated to meet general RF exposure requirements. The device can be used in portable exposure conditions without restriction. FCC ID: 2AVD2-M512109