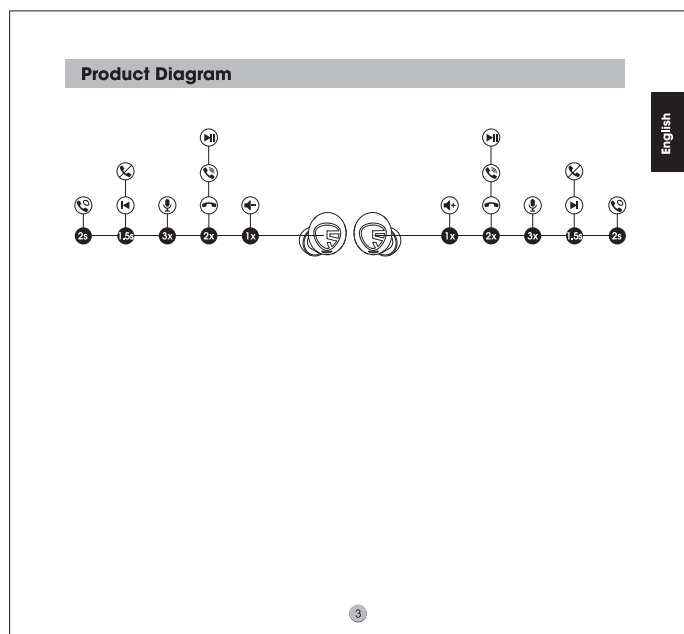 
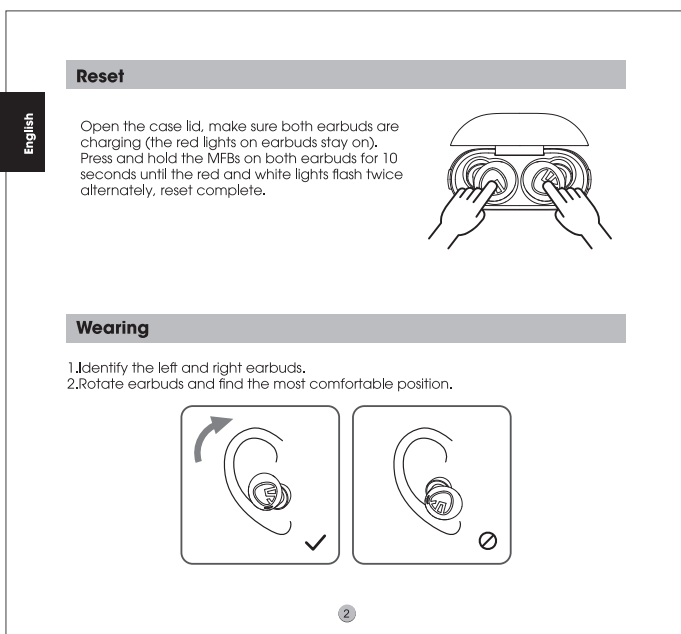 
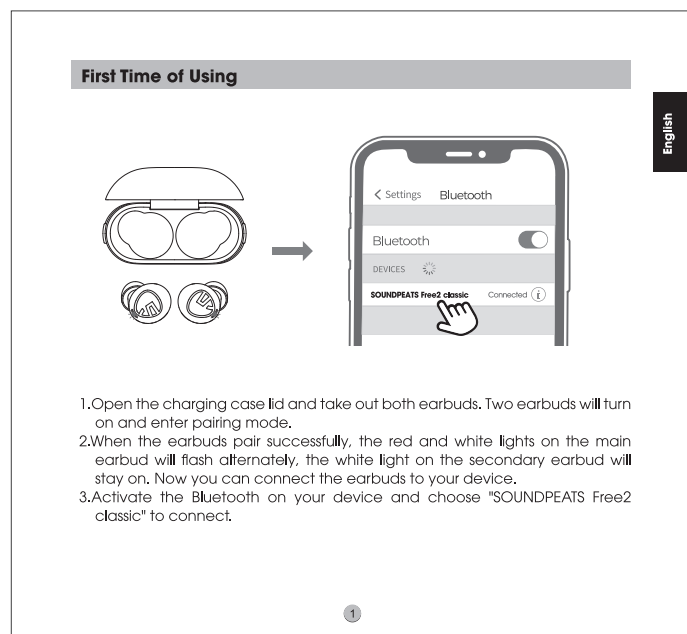 


单黑印刷

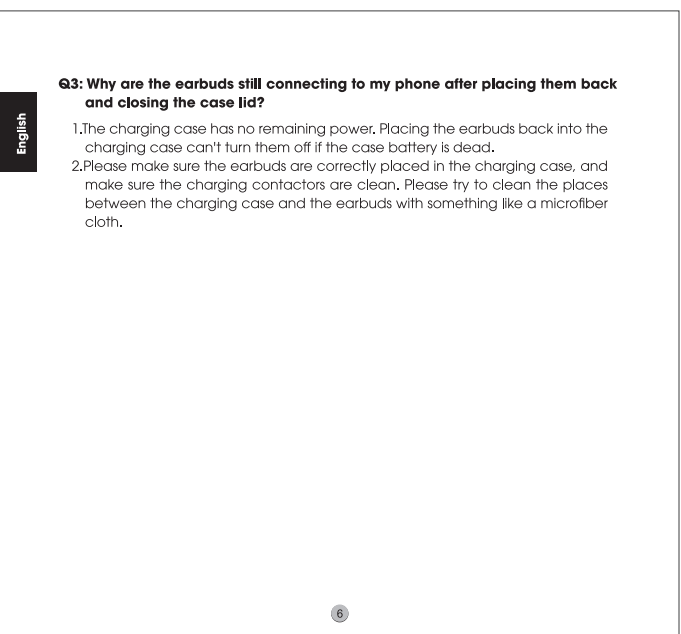 
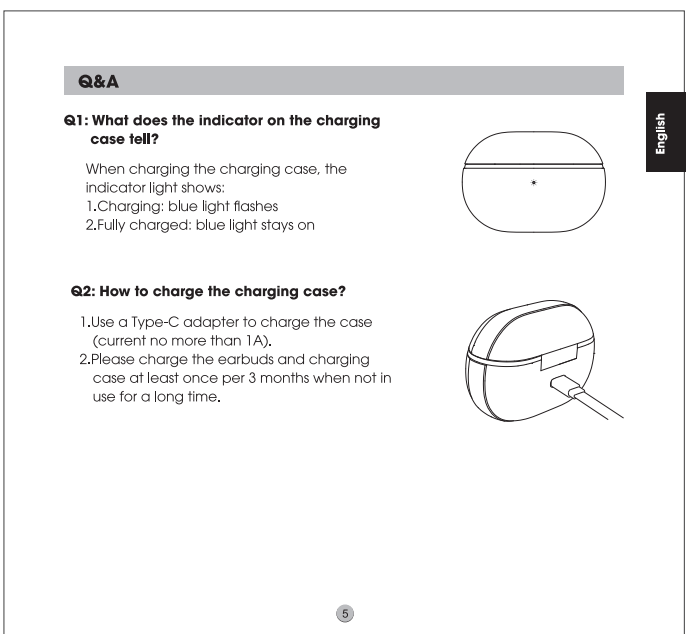 
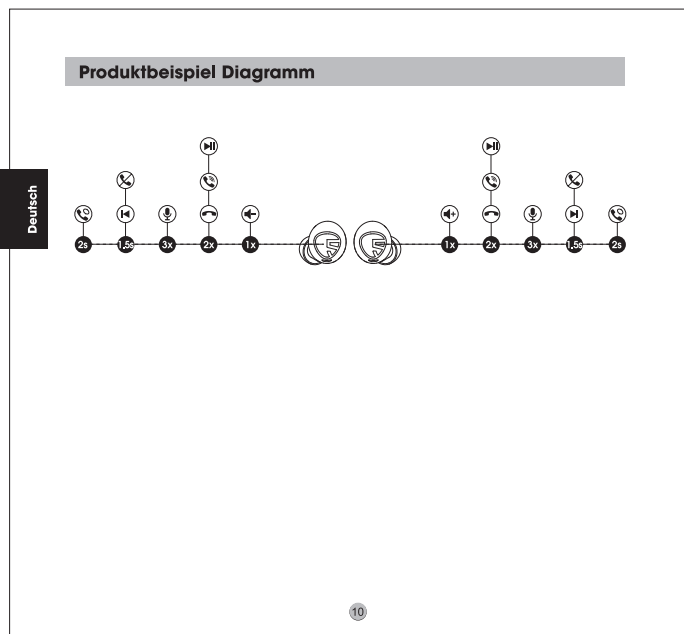 
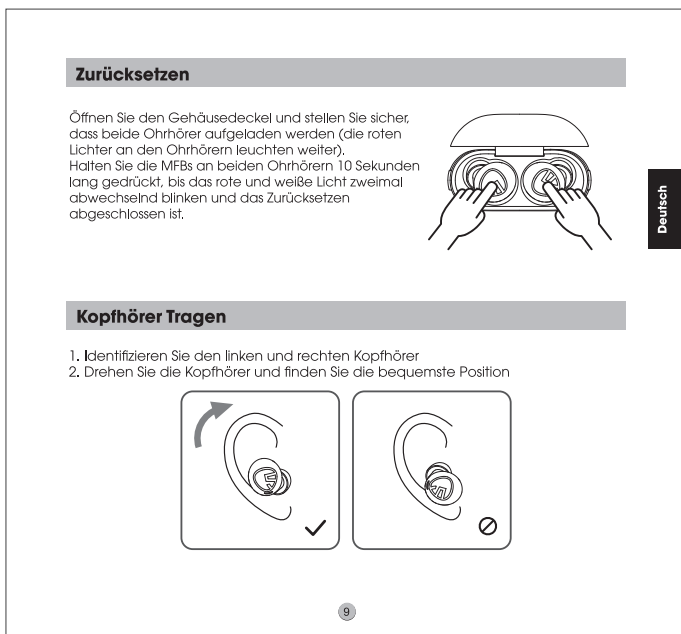 
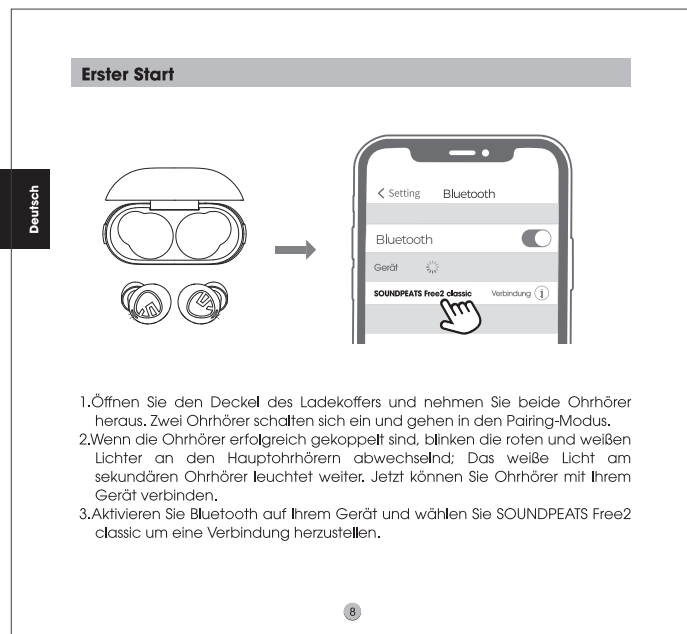 
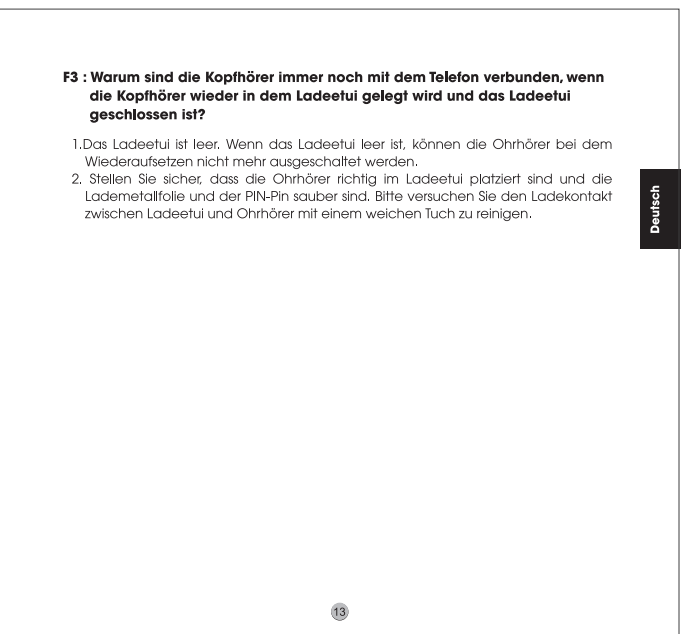 
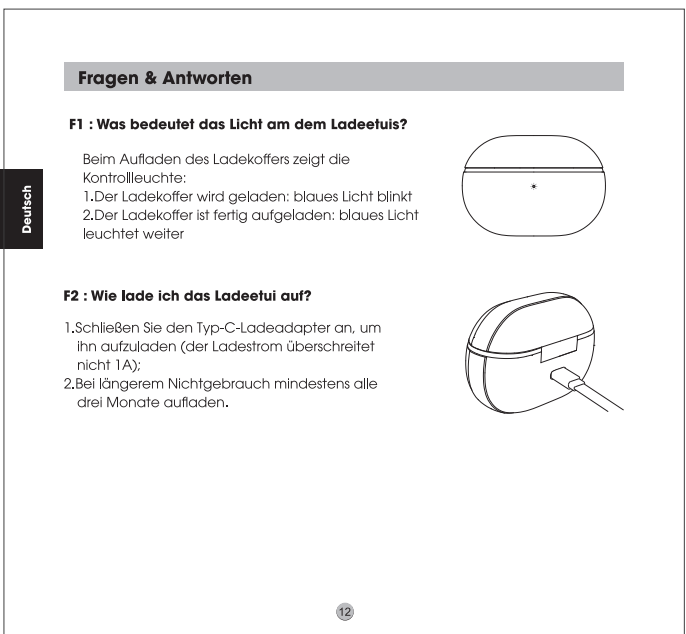 
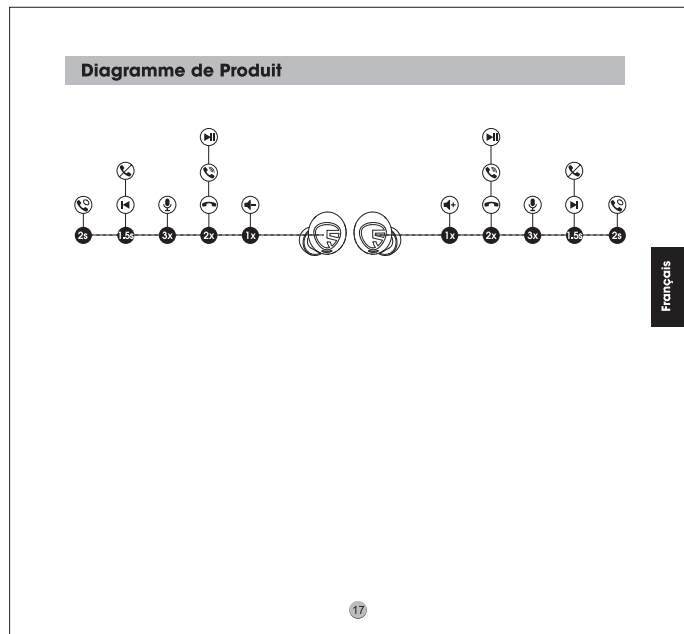 
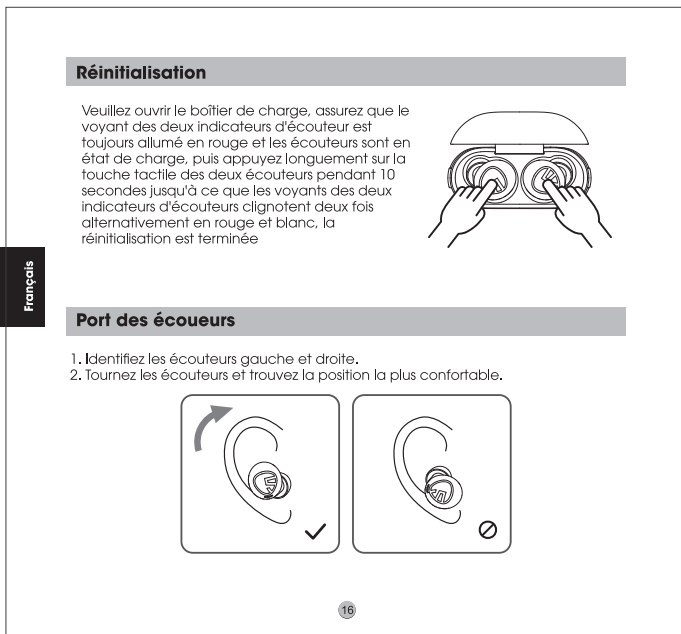 
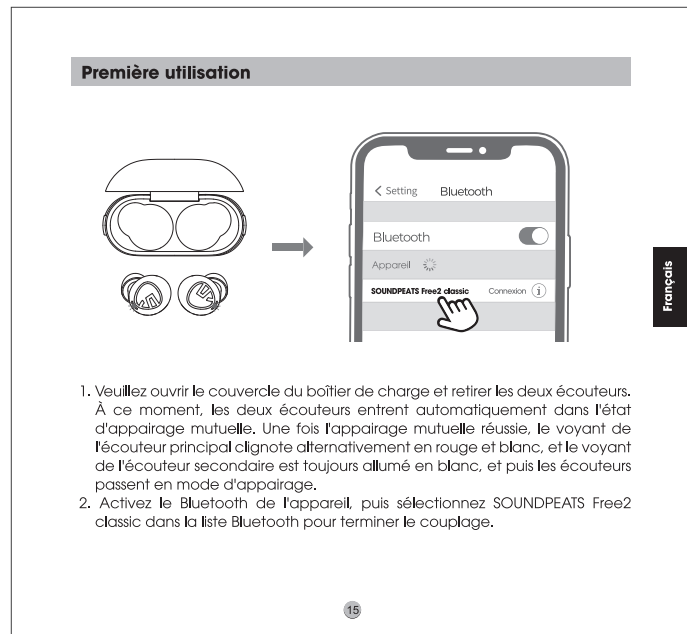 
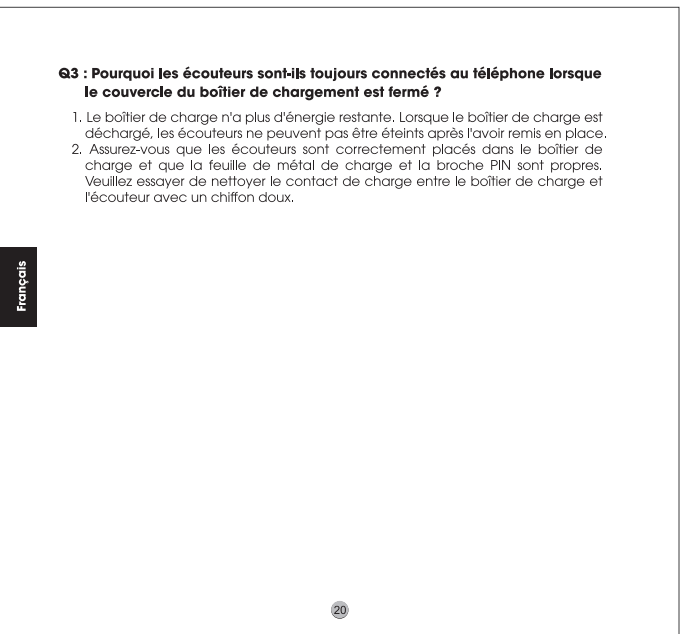 
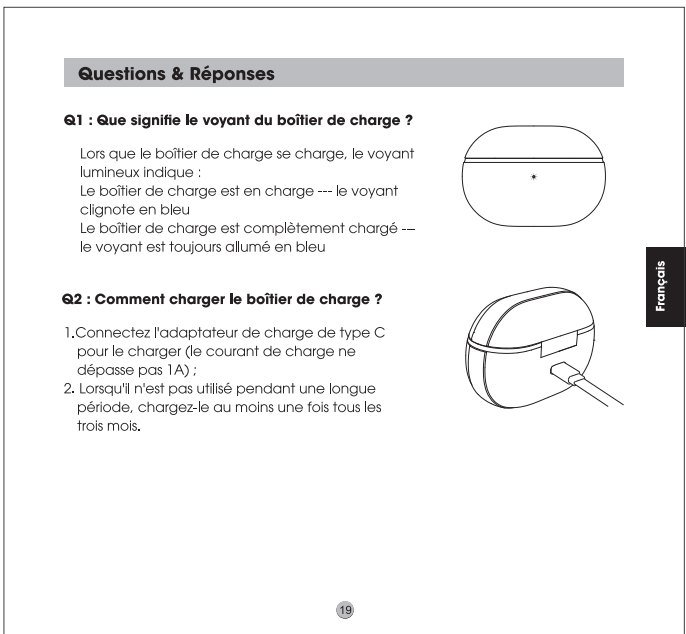 
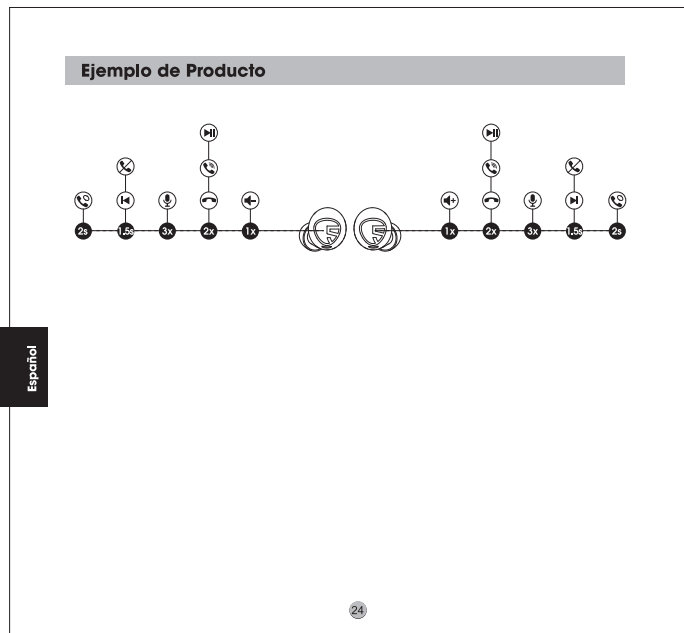 
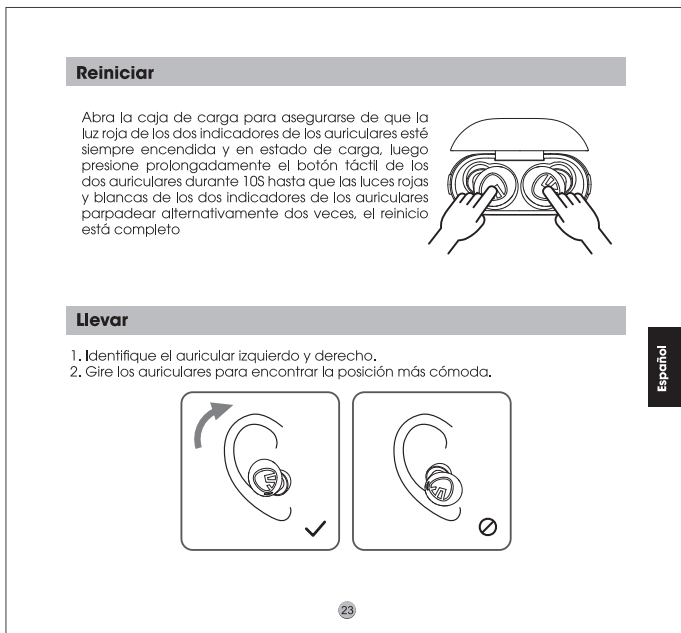 
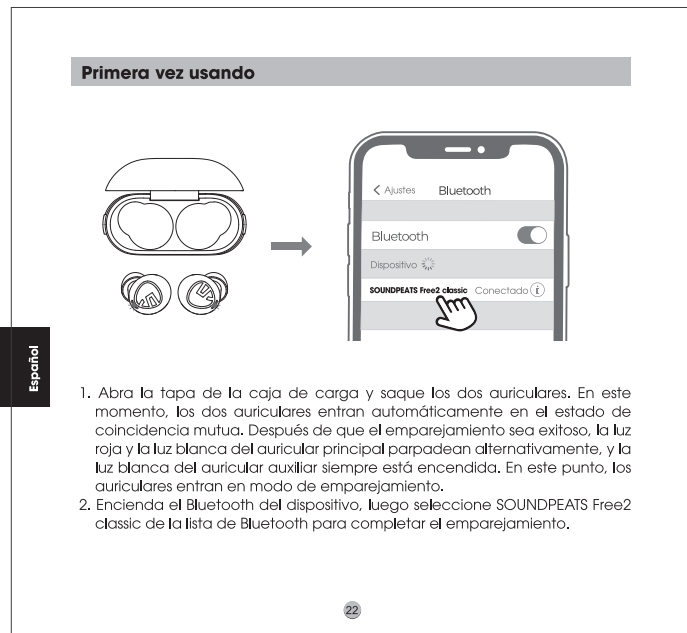 
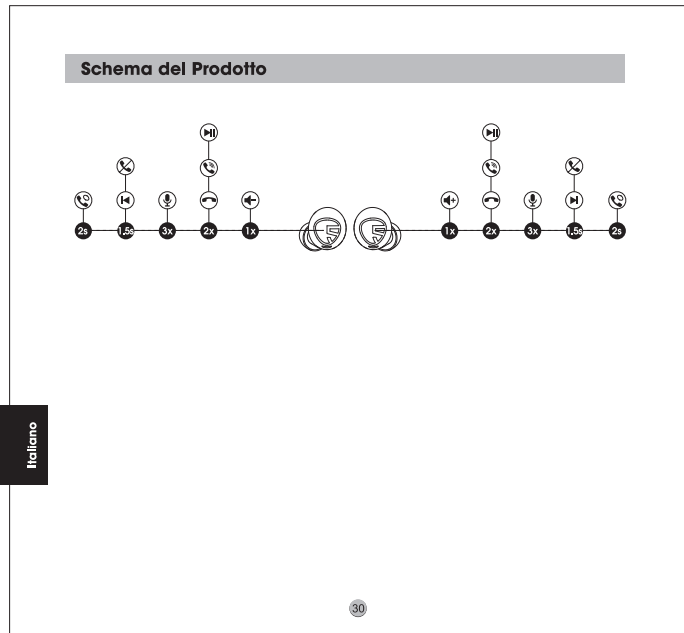 
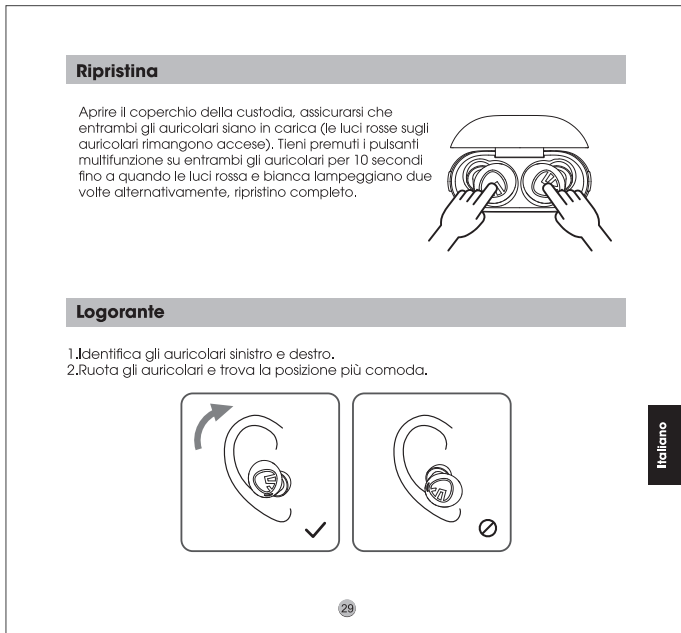 
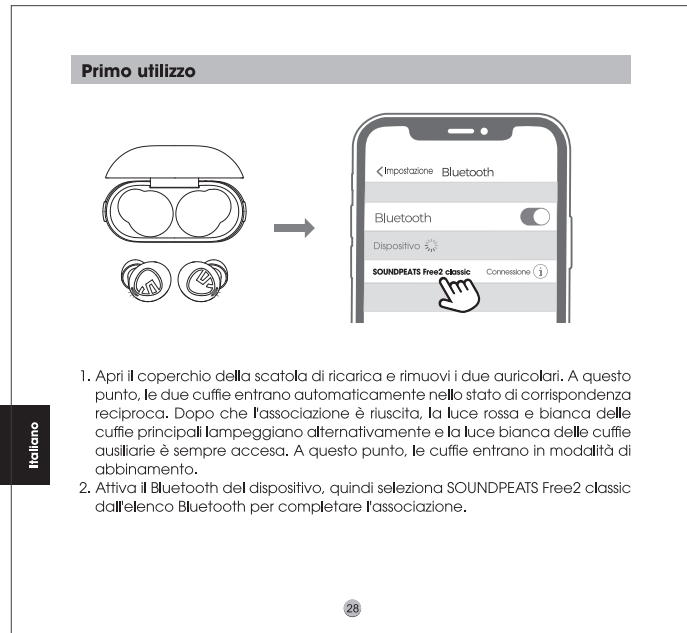 
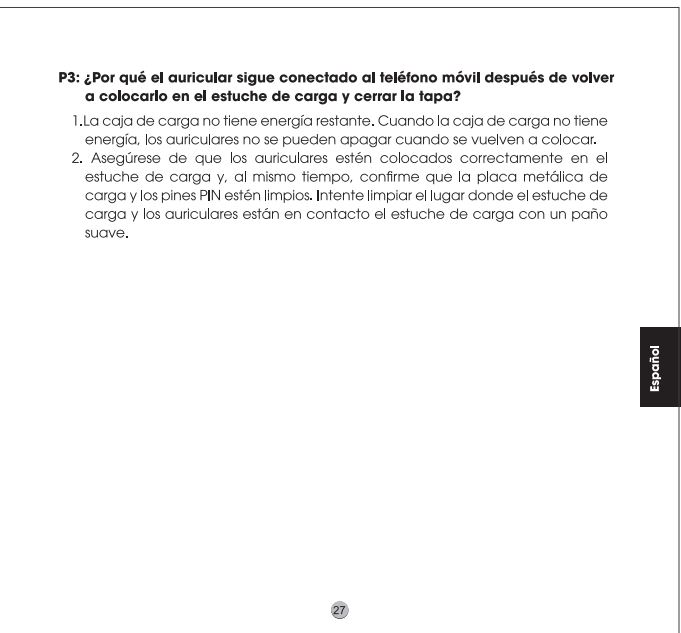 
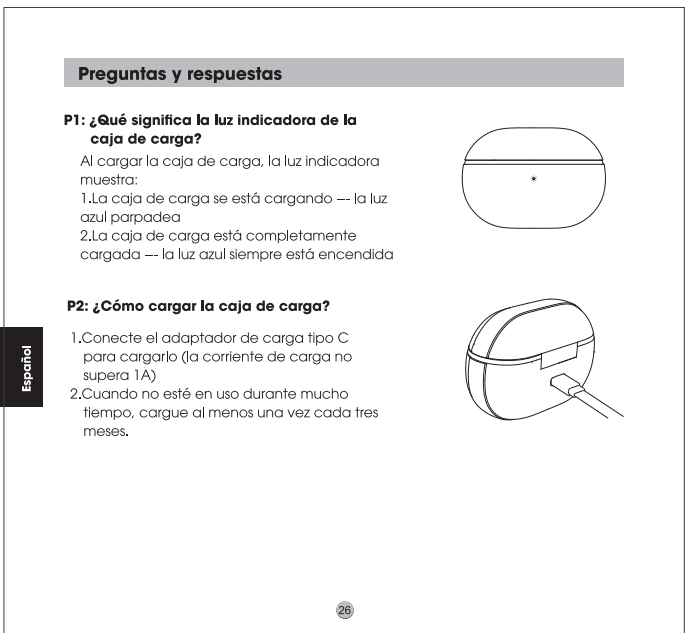 
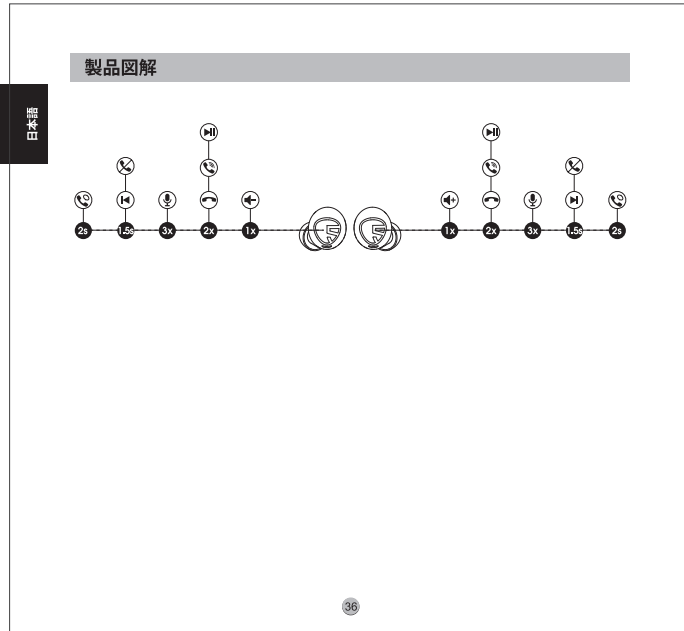 
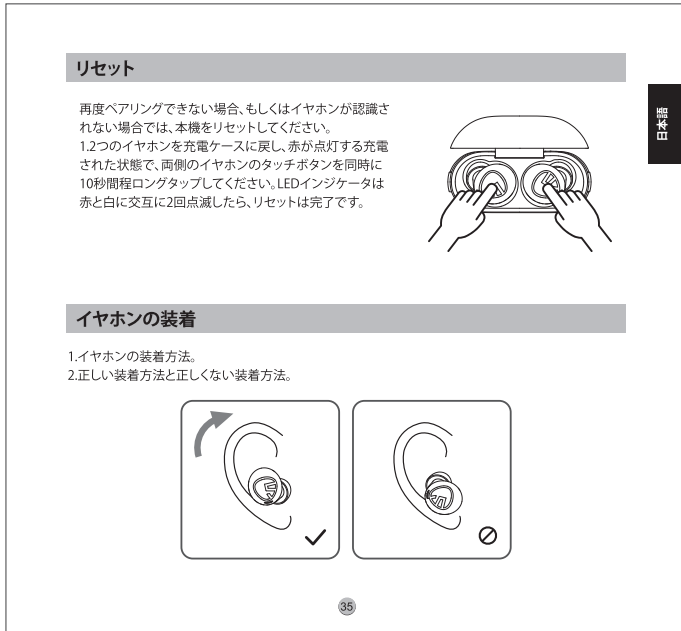 
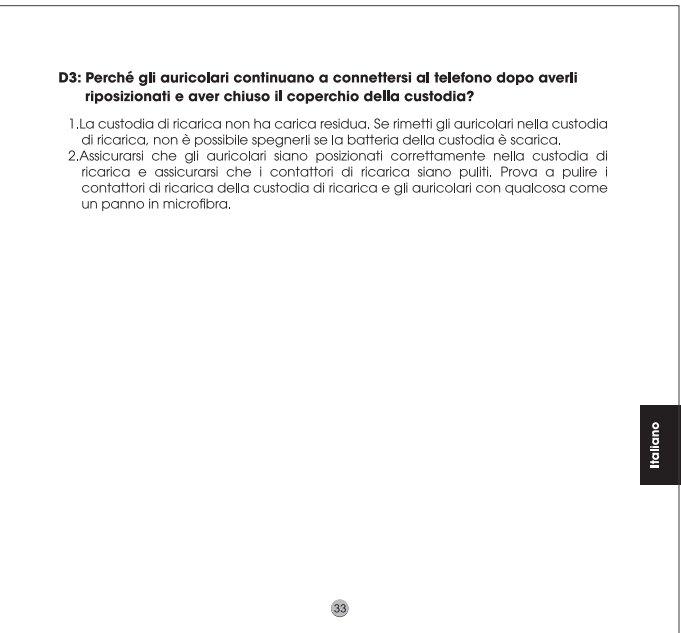 
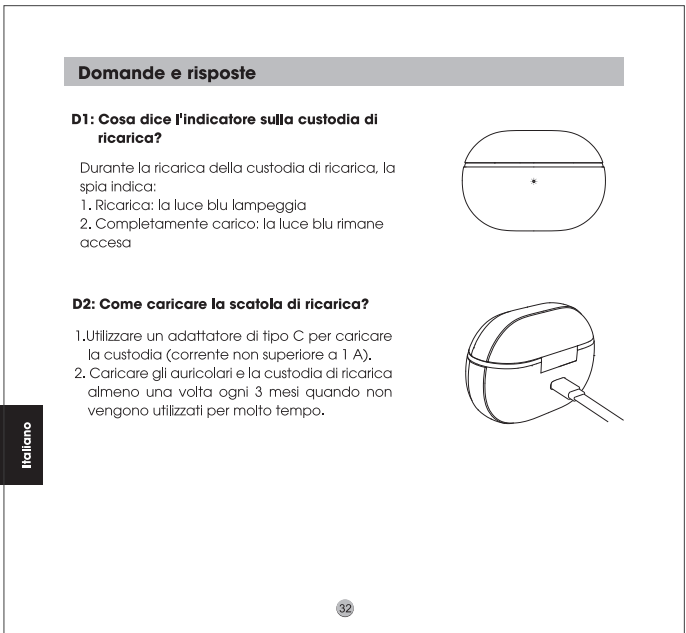 
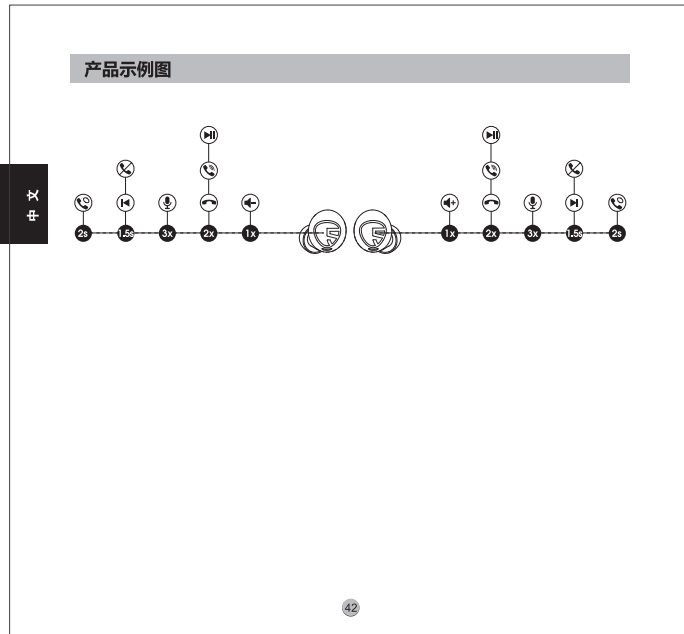 
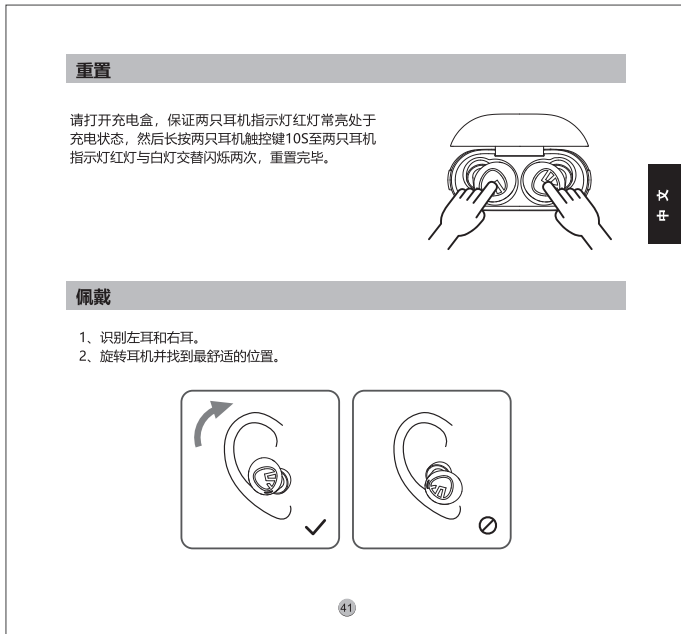 
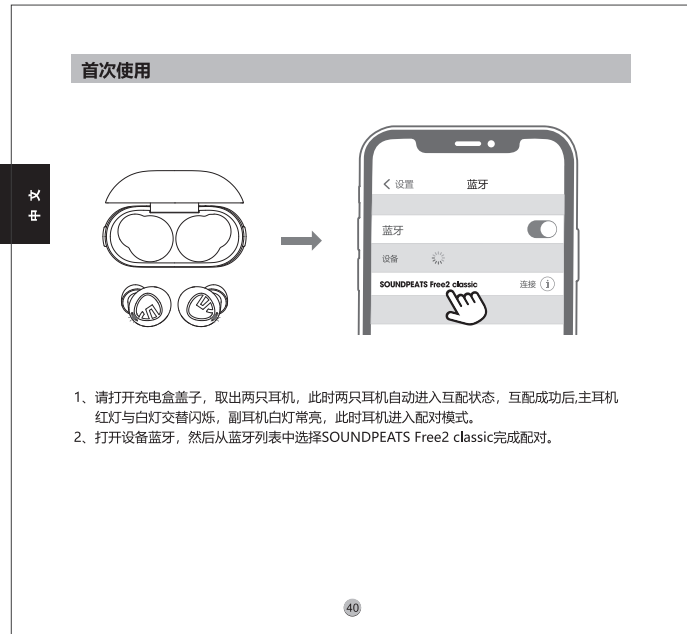 
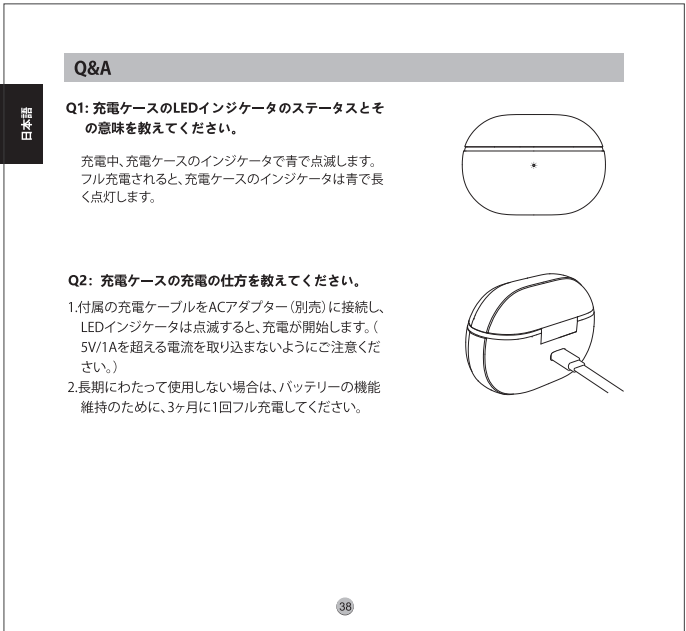 
材质：封面封底100克书纸 内页80克书纸 尺寸：90 x 84 mm



Contents	
English	1 - 7
Deutsch	8 - 14
Français	15 - 21
Español	22 - 27
Italiano	28 - 33
日本語	34 - 39
中文	40 - 44



Control	
Power On	Auto: Open the cover lid and scan out both antennas. Manual: Press and hold the MMS for 1s.
Power Off	Auto: Press the cover into charging case. Manual: Press and hold the MMS for 10s.
Play/Pause	Single tap the right MMS.
Volume +	Single tap the right MMS.
Volume -	Single tap the left MMS for 1/2s.
Previous track	Press and hold right MMS for 1/2s.
Next track	Press and hold left MMS for 1/2s.
Answer / Hanging Up Phone Call	Double tap the right MMS.
Reject Phone Call	Press and hold the MMS for 1/2s.
Switch Between Two Calls	Press and hold the MMS for 2s.
Manual Enter Number	Press and hold the MMS for 5s.
Activate Voice Assistant	Triple tap the right MMS.

[illegible][illegible][illegible][illegible][illegible][illegible][illegible][illegible][illegible]