



M-Mag.Air16

USER MANUAL



Technique specification and packing content

Product Name	Magnetic wireless power bank	Model	M-Mag.Air16
Battery Capacity	10000mAh/38.5Wh	Battery Type	Li-polymer battery
Rated Capacity	6160mAh(5V=2.4A)	Input (USB-C)	5V=3A, 9V=2A
Output (USB-C)	5V=2.4A, 9V=2.22A, 12V=1.5A	Wireless Charging Output	15W/10W/7.5W/5W
Combined Output	5V=2.4A	Size/Weight	109*71*19mm / 210g



Magnetic wireless power bank ×1




C-C Cable ×1



User manual ×1

Introduction

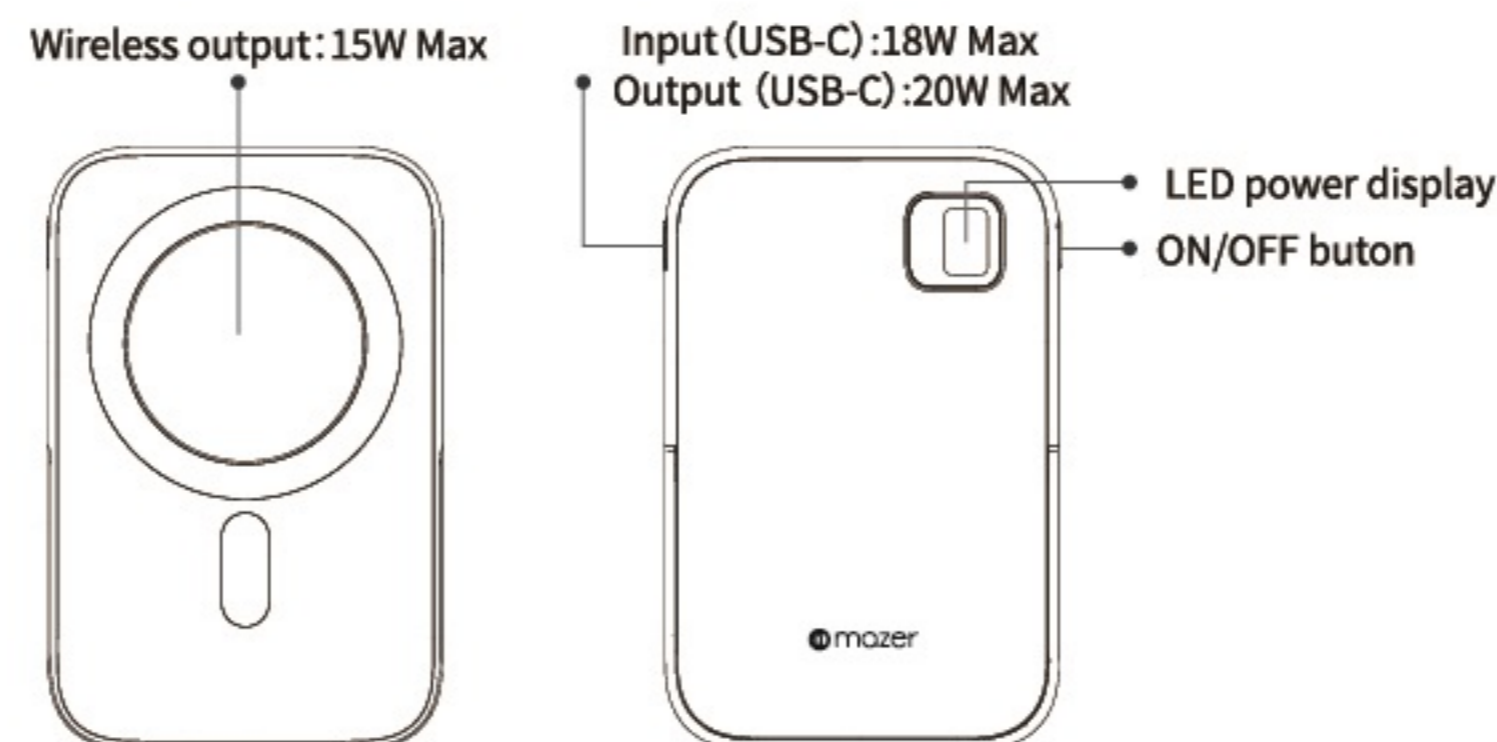

User guide

1. Charging for the Device



- 1) **Magnetic wireless charging**
Put the back of the iPhone 12 series or above against the wireless charging area to start wireless charging.



- 2) **The unique and innovative stand design**
Allow the mobile phone to be used horizontally and vertically at ease.



- 3) **Support wireless charging and usb-c port output at the same time**

2. Charge for M-MagAir16



The packager is equipped with C-C cable, which can be connected with the charger or the computer to charge for M-MagAir16

Usual problems and solution

1) Wireless charging does not charge

- The product battery is too low, please charge the product again;
- Charged products do not support wireless charging;
- The product to be charged is too far away from the wireless charging area;
- It is better to place the product to be charged on the wireless charging area;
- This product internal circuit malfunction, please contact with the company after sales.

2) The power bank does not work normally

- The product battery is too low, please charge the product again;
- The voltage of the charged product is not compatible with the output voltage of the product, please check the voltage of the charged product;
- The connection method between the filled product and the product is not correct;
- Charging cable, charging adapter is damaged, please replace the charging cable or adapter;
- This product internal circuit malfunction, please contact with the company after sales.

Warning

1. Please read the product manual carefully before using this product.
2. Do not throw the product into fire or liquid, and do not disassemble or modify the product without authorization.
3. Do not throw, knock or shake the product strongly, please store it in a dry place away from damp and corrosive items.
4. It can only be used in non-tropical environment, and below 2000m altitude.

Warranty information

1. For any defect, in the judgment of our technician, caused under normal use, we are responsible for repairing free of charges 12 months commencing from the date of purchase at the discretion of our company.
2. A valid warranty voucher or any original purchase invoice must be presented upon request of warranty service.
3. During the warranty period, this warranty shall not apply to the product if (a) it has explicitly modified or repaired in any way by persons other than technicians of our company, or (b) it has been damaged through misuse, malicious acts, negligence, and flow in any liquid, accident or natural calamities.
4. All conditions refer to the Chinese version.
5. If any damage causes to your product due to wrong usage, our company will not take any responsibilities.

Warranty card

Thank you for your purchase of Mazer's product. Mazer warrants that the product is at the time of its original purchase free of defects in workmanship and material. This Limited Warranty for the product shall last for twelve (12) months from the date of original purchase. This original warranty card and original invoice must be presented at the time you require warranty service or such warranty will be voided.

This limited warranty is valid only if the product is used for the purpose for which it was designed. It does not apply to damage or loss caused by negligence; physical abuse; misuse; accident; exposure to moisture; dampness or extreme thermal; unauthorized modifications; unauthorized opening or extreme thermal; of nature; or other actions beyond the reasonable control of Mazer. In case of when the warranty does not apply, a repair or replacement charge will be incurred. The customer shall be responsible for sending the defective product to and collecting the repaired or replaced product from the service centre.

Safety Instruction:

- a) The power bank will generate heat when charging. Always charge in a well ventilated area. Do not charge under pillows, blankets or on flammable surfaces.
- b) Keep the power bank away from heat sources, direct sunlight, combustible gas, humidity, water or other liquids.
- c) Do not disassemble, open, microwave, incinerate, paint or insert foreign objects into the power bank.
- d) Do not subject the power bank to mechanical shock such as crushing, bending, puncturing or shredding. Avoid dropping or placing heavy object on the power bank.
- e) Do not short-circuit the power bank or store it in a receptacle where it may be short-circuited by other metallic or conductive objects.
- f) Do not operate the power bank if it has been wet or otherwise damaged, to prevent against electric shock, explosion and/or injury. Contact the dealer or authorized agent.
- g) Power bank usage by children should be supervised.
- h) Please read the operating instructions (including charging instructions and information on the minimum and maximum operating temperatures), supplied with this power bank.

www.whymazer.com

Designed by Mazer in Singapore
Made in China

Check out our facebook page
whymazer

Find us on Instagram
mazerofficial_ig