



W7
User manual

CAUTION

1. All the safety and operating instructions should be read before the appliance is operated.
2. All operating and user instructions should be followed.
3. The appliance should not be used near water — for example, near a bathtub, washbowl, kitchen sink, laundry tub, in a wet basement, or near a swimming pool etc. It should not be exposed to dripping or splashing water, and no Objects filled with liquid, such as a vase, should be placed on the appliance.
4. Warning: To reduce the risk of fire of electric shock, do not expose this appliance to rain or moisture.
5. The appliance should be situated so that its location or position does not interfere with its proper ventilation. For example, the appliance should not be situated on a bed, sofa, rug, or similar surface that may block the ventilation openings; Or placed in a built-in installation, such as a closed bookcase or cabinet that may impede the flow of air through the ventilation openings.

PACKAGE CONTENTS

- | | |
|------------------|-----|
| Speaker | 1pc |
| Operation manual | 1pc |
| USB cable | 1pc |



BUTTON CONTROLS



Bluetooth, TF card & AUX mode

- ⏪ : **Prev/Volume decrease**
 - Short press to decrease the volume
 - Long press to select the previous song
- ⏸ : **Pair, Play/Pause**
 - Short press to Play/Pause the music
 - Long press to enter in to pairing mode
- ⏩ : **Next/Volume increase**
 - Short press to increase the volume level
 - Long press to select the next song
- 📶 : **Source**
 - Short press to switch among Bluetooth, TF card & AUX mode

Bluetooth mode

- Turn ON the W7 & this will auto search the available Bluetooth device.
- Turn ON the "Bluetooth" function on your device (Mobile phone or smart devices) and search for "Fenda W7". Enter "0000" if your device asks for the PIN code to connect with W7.
- Once the device is paired, at next Turn ON, W7 will auto search the Bluetooth device & will connect to paired one automatically.
- If can't find the paired device, W7 will enter in to pairing mode automatically. In case W7 does not enter in to pairing mode, remove the TF card. Now long press of Play/pause key will enter in to pairing mode.

F&D WARRANTY CARD

END-USER'S COPY
WARRANTY REGISTRATION CERTIFICATE

Mr./Mrs/Ms First Name: _____

Last Name: _____

Address: _____

Contact No.: _____

Product Name: _____

Model No.: _____

Serial No.: _____

Date Purchased: _____

Invoice No.: _____

Retail Outlet Where Purchased: _____

(Please print the name & address)

SECTION 1

F&D WARRANTY CARD

DISTRIBUTOR'S COPY
WARRANTY REGISTRATION CERTIFICATE

Mr./Mrs/Ms First Name: _____

Last Name: _____

Address: _____

Contact No.: _____

Product Name: _____

Model No.: _____

Serial No.: _____

Date Purchased: _____

Invoice No.: _____

Retail Outlet Where Purchased: _____

(Please print the name & address)

SECTION 2

WARRANTY TERMS & CONDITIONS

The warranty will be effective only if the warranty card is completed and returned to the company within 14 days from the date of purchase. We guarantee the provision of free services of F&D product within the warranty period, from its date of purchase from our Authorised Dealer. The period and conditions of our warranty service are as follow:

1. The warranty covers services by our F&D Authorised Dealer. This warranty card together with the receipt must be presented when servicing is required. This warranty card is irreplaceable in the event of loss.
2. Repair services will be provided for defects arising from normal usage for the following period, commencing from the date of purchase from our F&D Authorised Dealer. (Parts would be replaced when necessary)
 - A. Parts:..... 1 year
 - B. Technical service free..... 1 year
3. Under the following circumstances, service and parts will be chargeable even within the warranty period:
 - A. Failure to present the warranty card and receipt when servicing is required.

Full particulars not clearly shown or alterations made against the actual information.

For e.g.: Alteration of the date of purchase, serial numbers-altered or removed.
 - B. This unit being tampered with, altered in any way by any unauthorised technicians or which has been subjected to misuse, negligence or accident. This guarantee does not cover damage occurring in transit by or from the customer.
 - C. The defect is caused by the attack of household pests, fire, lighting, natural disasters, pollution, abnormal voltage or the usage of generator.

Shenzhen Fenda Technology Co., Ltd.
Add : Fenda Hi-Tech Park, Zhoushi Road, Shiyao, Baoan, Shenzhen, China
P.C. : 518108 Http://www.fenda.com

WARRANTY TERMS & CONDITIONS

The warranty will be effective only if the warranty card is completed and returned to the company within 14 days from the date of purchase. We guarantee the provision of free services of F&D product within the warranty period, from its date of purchase from our Authorised Dealer. The period and conditions of our warranty service are as follow:

1. The warranty covers services by our F&D Authorised Dealer. This warranty card together with the receipt must be presented when servicing is required. This warranty card is irreplaceable in the event of loss.
2. Repair services will be provided for defects arising from normal usage for the following period, commencing from the date of purchase from our F&D Authorised Dealer. (Parts would be replaced when necessary)
 - A. Parts:..... 1 year
 - B. Technical service free..... 1 year
3. Under the following circumstances, service and parts will be chargeable even within the warranty period:
 - A. Failure to present the warranty card and receipt when servicing is required.

Full particulars not clearly shown or alterations made against the actual information.

For e.g.: Alteration of the date of purchase, serial numbers-altered or removed.
 - B. This unit being tampered with, altered in any way by any unauthorised technicians or which has been subjected to misuse, negligence or accident. This guarantee does not cover damage occurring in transit by or from the customer.
 - C. The defect is caused by the attack of household pests, fire, lighting, natural disasters, pollution, abnormal voltage or the usage of generator.


Shenzhen Fenda Technology Co., Ltd.
Add : Fenda Hi-Tech Park, Zhoushi Road, Shiyao, Baoan, Shenzhen, China
P.C. : 518108 Http://www.fenda.com

3

Charging:

The unit has in-built rechargeable battery, Please follow the below given steps to charge the unit 1st time.


1. Connect the 1 end of supplied USB cable to micro USB jack of W7 & other end to the 5V USB power like PC, Laptop, charger.
2. RED Colored Indicator will be bright to indicate the charging & will turn dark once the unit is fully charged.

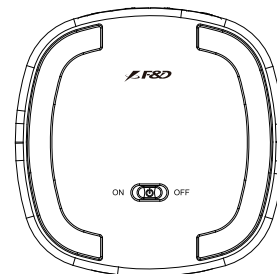

Specifications

- Power Output: 3W
- Speaker unit: 2.25" 4Ω
- Frequency Response: 20Hz-20KHz
- Power Input: 5V=500mA
- Separation: ≥40dB
- S/N Ratio: ≥75dB
- Product dimension: W86 x D86 x H117mm
- Rechargeable Li-ion Battery: 700mAh

SHENZHEN FENDA TECHNOLOGY CO., LTD.
ADD: Fenda Hi-Tech Park, Zhoushi Road, Shiyao, Baoan, Shenzhen, China
Tel: +86-755-27353888 (800 Line)
Fax: +86-755-27353777
P.C: 518108

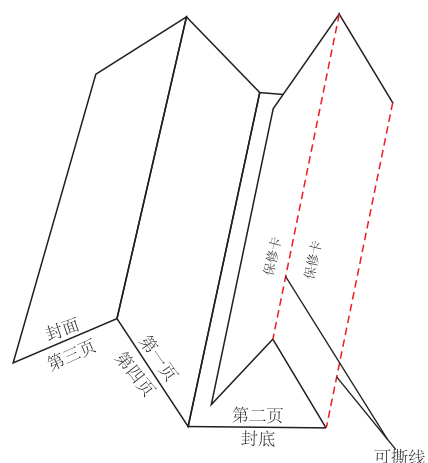

注：此处虚线部分
需要可扯开的虚线裁切

展开尺寸	350X120MM
成型尺寸	70X120MM
材质要求	80g 铜版纸
印刷要求	单黑正反印刷
工艺要求	无处理
页码数(页)	折页

F&D 奋达科技		时 间	20160705	订 单 号	YFE16145
品 牌	F&D	公司型号	W7	客 户 型 号	W7
版 本	A0	设计内容	说明书	料 号	17.7.030.1036
电 子 软 件	/	结 构 电 声	/	PLM文档编号	/
设计者	/	标 准 化	/	项 目 经 理	/
复 核	/	业 务	/	核 准	/