


USER'S GUIDE

OD17117(MULTI FUNCTION SPORT LCD WATCH)

CITIZEN WATCH CO.,LTD.
Q&Q SALES DEPARTMENT

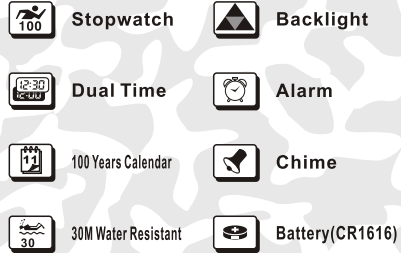

BUTTONS

- The operation of buttons are indicated by using the letters shown in the illustration.



- A -- Reset
- B -- Mode
- C -- Backlight
- D -- Start / Stop

DISPLAY

- The screen shown in below:



ATTENTION


- Never try to open the case or remove its back cover.
- Do not operate buttons under water.
- Should moisture appear inside the watch, have it checked immediately by your dealer. Otherwise it can cause erosion of the metal parts of the watch.
- Though the watch is designed to withstand normal use, you should avoid rough use or dropping the watch.
- Avoid exposing the watch to temperature extremes.
- Wipe the watch with dry, soft cloth only. Avoid all owing it to come into direct contact with chemical materials, which can cause deterioration of the plastic parts of the watch.
- Avoid to wear the watch in electromagnetic, static conditions.

MODE SELECTION

- Press "B" to change mode to mode in the following Sequence:
Timekeeping Mode → Alarm Mode → Stopwatch Mode → Dual Time Mode.

a TIMEKEEPING

- 12/24H Format;
- Hour, Minutes, Seconds, Day of week, Date;
- 100 years Calendar (2000 ~ 2099).



b ALARM

- Hourly time signal;
- The alarm sounds at the preset time each day.




c STOPWATCH

- 1/100 second unit;
- Measuring range: 0'00'00 ~ 23:59'59".



d DUAL TIME

- The time for other time zone.



BACKLIGHT

- The watch has backlight function, that can make the display to glow for easy reading in the dark.

Use Backlight

- In any mode, press and hold "C" to illuminate the display.



a TIMEKEEPING


12/24H Format



- In the timekeeping mode, press "A" to switch between 12/24H formats.



Calendar

- In the timekeeping mode, press and hold "D" to display: Year, Month, Date.



Time Setting

- In the timekeeping mode, press and hold "A" until the seconds to flash (flashing indicated in set mode);
- Press "D" to reset the seconds;
- Press "B" change to the next selection;
- Press "D" to increase the number, press and hold to increase at high speed;
- Repeat step 3 and 4, the selection in the following sequence: Seconds - Hour - Minutes - Year - Month - Date;
- Press "A" to exit the set state, after you set (The day of week is automatically displayed in accordance with year, month and date setting).



b ALARM


Alarm and Chime

- In the alarm mode, press "D" to on/off the alarm and chime in the following sequences: Alarm & Chime off - Alarm on - Chime on - Alarm & Chime on.



Alarm Time Setting

- In the alarm mode, press "A" the hour to flash (flashing indicated in set mode);
- Press "D" to increase the hour, press and hold to increase at high speed;
- Press "B" to select the minutes;
- Press "D" to increase the minutes, press and hold to increase at high speed;
- Press "A" to exit the set state, after you set.



- The alarm sounds at the preset time each day for about 60 seconds, press any button to break it.

c STOPWATCH

A Lap Time

- In the stopwatch mode, press "D" to start the stopwatch;



- To stop the stopwatch by pressing "D" again;



- Press "A" to reset the stopwatch.

Split Time

- In the stopwatch mode, press "D" to start the stopwatch;
- Press "A" to display the split time, stopwatch timing continues internally;
- Press "A" to clear the split time and to continue time measurement;
- Repeat step 2 and 3, you can measure the multi split time;



- Press "D" to stop the stopwatch.

d DUAL TIME

Dual Time Setting

- In the dual time mode, press "A" the hour to flash (flashing indicated in set mode);




- Press "D" to increase the hour, press and hold to increase at high speed;



- Press "B" to select the minutes;



- Press "D" to change the minutes (press once change 30 minutes);



- Press "A" to exit the set state, after you set.

LƯU Ý

HƯỚNG DẪN SỬ DỤNG



1. Không thử mở đồng hồ hay tháo mặt lưng.
2. Không bấm nút khi ở dưới nước.
3. Khi mặt đồng hồ bị ẩm, hãy mang đồng hồ ra trung tâm bảo hành để kiểm tra ngay lập tức. Nếu không các bộ phận bên trong có thể bị rỉ sét.
4. Vì đồng hồ được thiết kế cho việc sử dụng thông thường, bạn nên tránh sử dụng trong điều kiện khắc nghiệt hay làm rơi đồng hồ.
5. Tránh tiếp xúc đồng hồ với nhiệt độ quá cao hoặc quá thấp
6. Chỉ được lau chùi đồng hồ với vải mỏng, tránh tất cả các tiếp xúc trực tiếp với hoá chất có thể làm ảnh hưởng đến các bộ phận của đồng hồ
7. Tránh mang đồng hồ trong môi trường có điện từ trường hay môi trường tích điện

CÁC PHÍM BẤM


Cách hoạt động của các phím được xác định bằng các ký tự trong hình dưới đây.



- A -- Đặt lại
- B -- Chế độ
- C -- Đèn nền
- D -- Bắt đầu / Kết thúc

MÀN HÌNH

Màn hình được hiển thị giống hình bên dưới

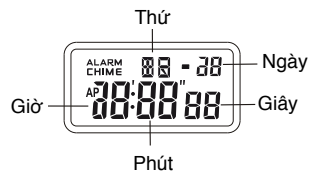

CHỌN CHẾ ĐỘ

Bấm "B" để chuyển qua lại giữa các chế độ theo thứ tự sau:
 Chế độ xem giờ -> Chế độ báo thức ->
 Chế độ bấm giờ -> Chế độ hai múi giờ

a XEM GIỜ

Định dạng 12/24h

Giờ, phút, giây, thứ, ngày

Lịch 100 năm (2000 ~ 2099)

b BÁO THỨC

Báo mỗi giờ

Chuông báo vào giờ cài đặt mỗi ngày

c BẤM GIỜ

Đơn vị 1/100

Giới hạn đếm:
 0'00"00 ~ 23:59'59"

d 2 MÚI GIỜ

Thời gian cho các múi giờ khác

ĐÈN NỀN

Đèn nền sử dụng EL (phát sáng điện tử) giúp màn hình sáng nhẹ để bạn dễ dàng xem được trong bóng tối

Dùng đèn nền

Ở bất kỳ chế độ nào, bấm "C" để tắt sáng màn hình trong 3 giây

a XEM GIỜ

Định dạng 12/24H

Ở chế độ xem giờ, bấm "A" để chuyển định dạng 12/24h

Lịch

Ở chế độ xem giờ, bấm và giữ "D" để hiển thị: Năm, Tháng, Ngày

Cài đặt thời gian

1. Ở chế độ xem giờ, bấm và giữ "A" cho đến khi đồng hồ giấy chớp tắt (thể hiện chế độ cài đặt)

2. Bấm "D" để cài đặt lại giây

3. Bấm "B" để chọn thành phần kế tiếp

4. Bấm "D" để tăng số, bấm và giữ để tăng với tốc độ nhanh hơn

5. Lặp lại bước 3 và 4, đồng hồ lần lượt chọn theo thứ tự sau:
 Giây -> Giờ -> Phút -> Năm -> Tháng -> Ngày

6. Bấm "A" để thoát, sau khi bạn cài đặt xong (Thứ sẽ tự động được cài đặt dựa trên cài đặt của năm, tháng và ngày)

b BÁO THỨC

Báo thức và âm báo

Ở chế độ báo thức, bấm "D" để mở/tắt báo thức và chuông báo theo thứ tự sau:

Báo thức và chuông báo cùng tắt ->
 Báo thức bật -> Chuông báo bật ->
 Báo thức và chuông báo cùng bật

Cài đặt báo thức

1. Ở chế độ báo thức, bấm "A" để phần giờ chớp (thể hiện chế độ cài đặt)

2. Bấm "D" để tăng giờ, bấm và giữ để tăng với tốc độ nhanh hơn

3. Bấm "B" để chọn phút

4. Bấm "D" để tăng phút, bấm và giữ để tăng ở tốc độ nhanh hơn

5. Bấm "A" để thoát, sau khi cài đặt xong

Âm báo thức được cài đặt reo 60 giây mỗi lần bấm bất kỳ nút nào để im lặng

c BẤM GIỜ

Thời gian 1 vòng

1. Ở chế độ bấm giờ, bấm "D" để bắt đầu đồng hồ đếm giờ

2. Để ngưng đồng hồ bấm giờ bấm "D" lần nữa

3. Bấm "A" để cài đặt lại đồng hồ bấm giờ

Chia thời gian

1. Ở chế độ bấm giờ, bấm "D" để bắt đầu đồng hồ đếm giờ

2. Bấm "A" để hiển thị chia giờ, đồng hồ bấm giờ vẫn tiếp tục chạy ngầm

3. Bấm "A" để xoá chia giờ và tiếp tục đếm thời gian

4. Lặp lại bước 2 và 3, bạn có thể đếm chia giờ nhiều lần

5. Bấm "D" để ngưng đồng hồ đếm giờ

d HAI MÚI GIỜ

Cài đặt hai múi giờ

1. Ở chế độ hai múi giờ, bấm "A" để phần giờ chớp tắt (thể hiện chế độ cài đặt)

2. Bấm "D" để tăng giờ, bấm và giữ để tăng ở tốc độ nhanh hơn

3. Bấm "B" để chọn phút

4. Bấm "D" để thay đổi phút (bấm 1 lần thay đổi 30 phút)

5. Bấm "A" để thoát chế độ, sau khi cài đặt