


材质: 80g双铜纸
尺寸: 75x100mm


BLUETOOTH SPEAKER Rezo Light Motion K118

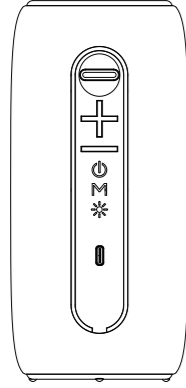


User manual

Thank you for purchasing Bluetooth Speaker Rezo Light Motion K118.
Please carefully read user guide in properly and keep this for further reference.


Packing list

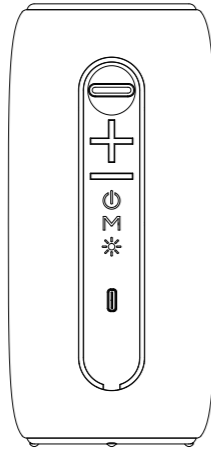

1 pc speaker

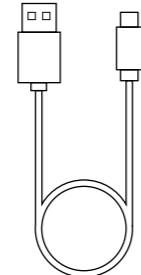


1 pc Type-C charging cable

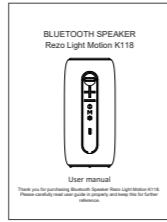

1 pc user manual

Key function direction

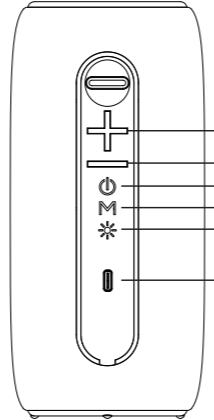

- ① Next track/Volume+
- ② Previous track/Volume-
- ③ Power Button
- ④ Mode button
- ⑤ light button
- ⑥ Type-C charging
- ⑦ AUX Port
- ⑧ TF card
- ⑨ USB charging

Power On/Off

Power On: Long press the power button for 3 seconds in the shutdown state; when the speaker starts up, the speaker will sound "ting, ting, ting, ting" and the white light turns on.

Power off: Long press the power button for 3 seconds in the boot state to shut down the speaker. The speaker will sound "ting, ting ting ting" and the white light turns off.

Telephone function

When calling on phone, short press the power button to answer, double-click to refuse, short press to hang up the call after connecting.

Mode button

Click on the "M": bluetooth, AUX access, FM mode, TF card;

TWS function: While at the same time open two devices and not connected in the bluetooth mode, long press series can connect two speakers together.

Light button

Long press "*" close/open lighting effects, click to switch the lights change effect.

Music Broadcast

Short press "-" button when playing music, the player will play the last track.

Long press "-" to decrease the volume continuously.

Short press "+" button when playing music, the player will play the last track;

Long press "+" to decrease the volume continuously.

Playing MP3 files from Micro SD or USB Device:

1. Insert the USB drive into USB port or Micro SD card into TF Slot.
 2. Play, pause or skip a selected track using the controls on the speaker.
- Note:
- a. We cannot guarantee the support of all USB devices.
 - b. USB port does not support USB charging for external device.

Type-C charging

1. Please use provided Type-C cable for charging, charging with a DC5V~1A USB power adapter.
2. When the speaker is charging, the white light will flash; when fully charged it will light up.

Bluetooth Connection

1. Press and hold the power key for 3s to start the machine, Bluetooth enters the pairing mode.
2. Turn on the mobile phone, turn on Bluetooth, search for the Bluetooth code name "Rezo Light Motion K118" and click; after a few seconds, you will hear the prompt tone "ting, ting" of successful pairing and connection, the mobile phone displays connected.
3. In subsequent use, as long as the device's bluetooth is turned on, it can be automatically connected.

Note:

If you want to connect to another device, need to disconnect the bluetooth on the current device which is connecting bluetooth to the speaker.

FM mode

Press the M button into FM mode, short press power button to search station automatically, press again to stop searching. Then, short press "+", "-", " " to choose the FM station.
Note: In the FM mode, need in micro charging cable or AUX cable to increase the FM radio signal.

Product parameters:

Bluetooth Version: 5.1
Watts: 5W*2
Working Distance: 8 - 10m
Battery Capacity: 1200mAh
Voltage: DC 5V/1A


Attentions:

1. Do not use abrasive cleaners to clean this product.
2. Do not allow this product to be heated, close to fire source or direct sunlight for a long time. It will easy to burn and damage the electronic components.
3. Do not attempt to disassemble this product to make any modifications.
4. Do not use this product in the rain.
5. If you do not plan to use this product for a long time, please store it in a dry environment and charge the speaker at least once a month to prolong its life and avoid extreme temperatures and dust.
6. If you saw smoke coming out of the machine or other improper phenomenon, please contact the retailer to solve the issue immediately.
7. Do not throw the machine

Note!

In order to improve product performance, our products are constantly updated. It is no additional notice about technical issues and this manual is for reference only, please forgive.
Thank you for your purchase.


LOA BLUETOOTH Rezo Light Motion K118

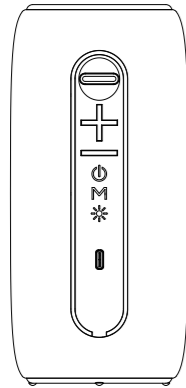


Hướng dẫn sử dụng

Cảm ơn bạn đã lựa chọn Loa Bluetooth Rezo Light Motion K118.
Vui lòng đọc kỹ hướng dẫn để sử dụng đúng cách và giữ lại để tham khảo thêm.

Bộ sản phẩm gồm

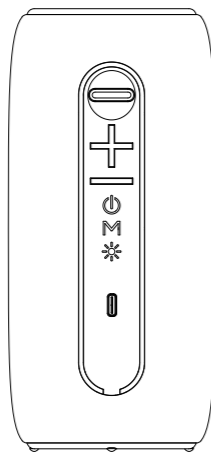

1 pc Loa bluetotot
Rezo Light Motion K118

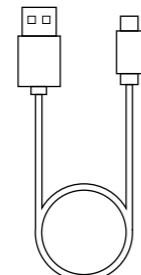


1 pc dây sạc loa Type-C



1 pc hướng dẫn sử dụng

Key function direction

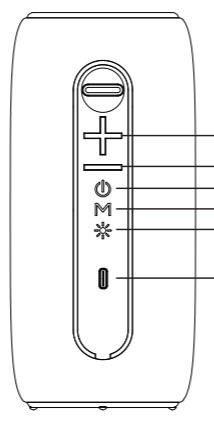

- ① Qua bài tiếp theo/giảm âm lượng
- ② Quay lại bài trước/ tăng âm thanh
- ③ Nút nguồn
- ④ Nút đổi chế độ kết nối
- ⑤ Nút điều khiển đèn
- ⑥ Khe cắm sạc Type C
- ⑦ Khe cắm AUX
- ⑧ Khe cắm TF card
- ⑨ Khe cắm USB

Bật / tắt nguồn

Bật nguồn: Nhấn và giữ nút nguồn trong 3 giây ở trạng thái tắt máy, loa sẽ vang lên "ting, ting, ting, ting" và đèn màu trắng sáng.

Tắt nguồn: Nhấn và giữ nút nguồn trong 3 giây ở trạng thái khởi động để tắt loa, loa sẽ vang " ting, ting, ting, ting" và đèn màu trắng tắt.

Chức năng cho cuộc gọi

Khi có cuộc gọi đến trên điện thoại, bấm nhanh nút nguồn để trả lời, bấm 2 lần để từ chối, bấm nhanh để ngắt cuộc gọi sau khi kết nối.

Nút M:

Nhấp vào "M": để truy cập các dạng kết nối khác nhau: Bluetooth, truy cập AUX, chế độ FM, thẻ TF.

Kết nối hai loa: Mở nguồn hai loa cùng một thời gian và ở trạng thái không kết nối bluetooth, nhấn và giữ nút M cả hai loa để có thể kết nối hai loa với nhau.

Nút đèn

Nhấn và giữ "*" tắt/mở đèn, nhấp nhanh để thay đổi hiệu ứng ánh sáng của đèn.

Nút tăng/giảm âm:

Nhấn nhanh nút "-" khi phát nhạc, loa sẽ phát lại bài hát trước đó.

Nhấn và giữ "-" để giảm âm lượng.

Nhấn nhanh nút "+" khi phát nhạc, loa sẽ phát bài hát tiếp theo.

Nhấn và giữ "+" để tăng âm lượng liên tục.

Phát nhạc MP3 từ Micro SD hoặc Thiết bị USB:

1. Cắm USB vào cổng USB hoặc thẻ Micro SD vào Khe cắm TF.
2. Phát, tạm dừng hoặc bỏ qua bản nhạc đã chọn bằng các nút điều khiển trên loa.

Lưu ý:

- a. Chúng tôi không thể đảm bảo hỗ trợ tất cả các thiết bị USB.
- b. Cổng USB không hỗ trợ sạc USB cho thiết bị khác.

Sạc Type-C

1. Vui lòng sử dụng cáp Type-C được cung cấp để sạc, sạc loa bằng bộ chuyển đổi USB DC-5V ~ 1A.
2. Khi loa đang sạc, đèn màu trắng sẽ nhấp; khi sạc đầy thì nó sẽ sáng và không còn nhấp.

Kết nối Bluetooth

1. Nhấn và giữ phím nguồn trong 3s để khởi động máy, Bluetooth chuyển sang chế độ chờ ghép nối.
2. Bật điện thoại di động, bật Bluetooth, tìm kiếm tên Bluetooth "Rezo Light Motion K118" và nhấp vào; sau vài giây, bạn sẽ nghe thấy âm báo "ting, ting" nhắc ghép nối và kết nối thành công, điện thoại di động hiển thị được kết nối.
3. Trong lần sử dụng tiếp theo, Loa có thể tự động kết nối khi Bluetooth của thiết bị mà được kết nối gần nhất đang mở.

Lưu ý:

Nếu muốn kết nối với thiết bị khác, cần ngắt kết nối bluetooth trên thiết bị hiện tại đang kết nối bluetooth với loa.

Chế độ FM

Nhấn nút M để vào chế độ FM, nhấn nhanh nút nguồn để tự động tìm đài phát, nhấn lần nữa để dừng tìm kiếm. Sau đó, ấn nhanh nút "+", "-", " " để chọn kênh FM.

Ghi chú: Ở chế độ FM, cần cắm cáp sạc micro hoặc cáp AUX để tăng tín hiệu đài FM.

Thông số kỹ thuật:

Phiên bản bluetooth: 5.1
Công suất: 5W*2
Khả năng kết nối: 8 - 10m
Dung lượng pin: 1200mAh
Điện áp: DC 5V/1A

Chú ý:

1. Không sử dụng chất tẩy rửa mài mòn để làm sạch sản phẩm.
2. Không để Loa bị làm nóng, gần nguồn lửa hoặc tiếp xúc trực tiếp với ánh nắng mặt trời trong thời gian dài, nó sẽ dễ làm cháy và hỏng các linh kiện điện tử.
3. Không cố gắng tháo rời sản phẩm này để thực hiện bất kỳ sửa đổi nào.
4. Không sử dụng sản phẩm này dưới trời mưa.
5. Nếu bạn không định sử dụng sản phẩm này trong một thời gian dài, vui lòng bảo quản nó ở nơi khô ráo và sạc loa ít nhất mỗi tháng một lần để kéo dài tuổi thọ của loa cũng như tránh nhiệt độ quá cao và bụi.
6. Nếu nhìn thấy khói bốc ra từ máy hoặc hiện tượng bất thường khác vui lòng liên hệ với nhà bán lẻ để giải quyết vấn đề ngay lập tức.
7. Không tác động mạnh hay để vật nặng lên loa.

Ghi chú!

Để nâng cao hiệu suất của sản phẩm, sản phẩm của chúng tôi được cập nhật liên tục. Nội dung có thể thay đổi mà không báo trước và sách hướng dẫn này chỉ mang tính chất tham khảo, mong bạn thứ lỗi. Cảm ơn bạn vì đã mua hàng.