


材质： 80g双铜纸
尺寸： 75x75mm



MULTIMEDIA SPEAKERS
2.1 AVA+ LED MINI N171

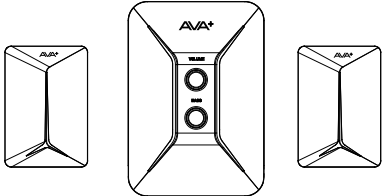

User Manual

Thank you for purchasing Multimedia speakers AVA+ Led Mini N171.
Please carefully read user guide in properly and keep this for further reference.

Packing list

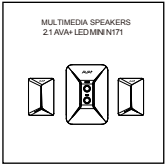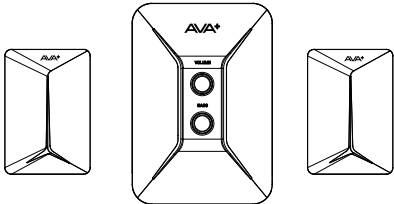

1. Subwoofer Speakers

2. Satellite Speaker

3. USB plug cable

4. User manual

5. 3.5mm jack cable

1 pcs

2 pcs

1 pc

1 pc

1 pc

Product specifications:


- Amplifier power output:RMS: 5W+ 3W x 2 (THD1%)

- Power Input: DC 5V/1A or USB

- Frequency Response: 150HZ -20KHZ

- S/N Ration:>=35db

Key function direction

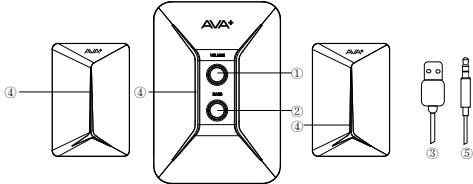

① Volume controller to increase and decrease.

② Bass volume controller to increase and decrease

③ USB power-plug

④ RGB light

⑤ 3.5mm jack plug of audio cable

Instructions for use

Step 1. Plug the 3.5mm stereo jack into PC signal outlet, or the other audio source output sockets.

Step 2. Connect the USB power plug to a USB powered device (PC, laptop, etc.) or a USB adapter for power, the RGB light will be on.

Note:
Disconnect the power from power source when not in use.

* Volume controller:

Turn the volume control clockwise to increase the volume.

Turn the volume control counter clockwise to decrease the volume.

* Bass volume controller:

Turn the bass control clockwise to boost the bass.

Turn the bass control counterclockwise to decrease the bass.

Attentions:

1. Do not use abrasive cleaners to clean this product.

2. Do not allow this product to be heated, close to fire source or direct sunlight for a long time. It will easy to burn and damage the electronic components.

3. Do not attempt to disassemble this product to make any modifications.

4. Do not use this product in the rain.

5. If you do not plan to use this product for a long time, please store it in a dry environment and avoid extreme temperatures and dust.


6. If you saw smoke coming out of the machine or other improper phenomenon , please contact the retailer to solve the issue immediately.

7. Do not throw the machine.

8. Unplug the product before cleaning it, use only a dry cloth.

Note!
In order to improve product performance, our products are constantly updated. It is no additional notice about technical issues and this manual is for reference only, please forgive.
Thank you for your purchase.



LOA VI TÍNH
2.1 AVA+ LED MINI N171

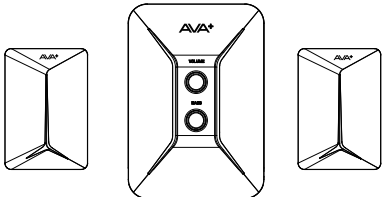

Hướng dẫn sử dụng

Cảm ơn bạn đã lựa chọn Loa vi tính AVA+ Led Mini N171.
Vui lòng đọc kỹ hướng dẫn để sử dụng đúng cách và giữ lại để tham khảo thêm.

Bộ sản phẩm gồm

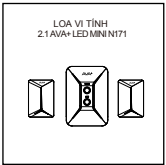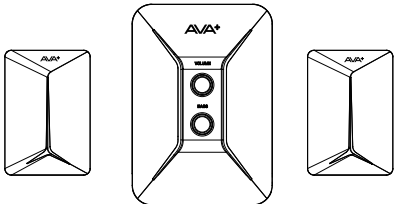

1. Loa Sub: 1 cái

2. Loa vệ tinh: 2 cái

2. Cáp USB: 1 cái

3. Hướng dẫn sử dụng: 1 cái

4. Cáp âm thanh jack 3.5mm: 1 cái

Thông số kĩ thuật:


Công suất đầu ra:
RMS: 5W+ 3W x 2 (THD1%)

Đầu vào nguồn: DC 5V/1A hoặc USB

Tần số hoạt động: 150HZ -20KHZ

Tỉ số nén nhiễu:>=35db

Chức năng các phím

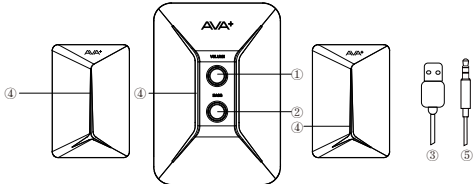

① Bộ điều khiển tăng hay giảm âm lượng

② Bộ điều khiển tăng hay giảm âm bass

③ Jack cắm điện USB

④ Đèn RGB

⑤ Jack cắm 3.5mm

Cách sử dụng :

Bước 1. Cắm giắc 3,5 mm vào PC hoặc nguồn âm thanh khác để thu tín hiệu âm thanh.

Bước 2. Kết nối đầu cắm nguồn USB với thiết bị có nguồn điện USB (PC, laptop,vv) hoặc với bộ chuyển đổi USB để có nguồn điện, lúc này đèn RGB sẽ sáng.

Chú ý:
Rút nguồn ra khỏi nguồn điện khi không sử dụng loa.

* Nút điều chỉnh âm lượng:

Xoay nút điều chỉnh âm lượng theo chiều kim đồng hồ để tăng âm lượng.

Xoay nút điều chỉnh âm lượng ngược chiều kim đồng hồ để giảm âm lượng.

* Nút điều khiển âm bass:

Xoay nút điều khiển âm trầm theo chiều kim đồng hồ để tăng âm bass.

Xoay điều khiển âm trầm ngược chiều kim đồng hồ để giảm âm bass.

Chú ý:

1. Không sử dụng chất tẩy rửa mài mòn để làm sạch sản phẩm.

2. Không để Loa bị làm nóng, gần nguồn lửa hoặc tiếp xúc trực tiếp với ánh nắng mặt trời trong thời gian dài, nó sẽ dễ làm cháy và hỏng các linh kiện điện tử.

3. Không cố gắng tháo rời sản phẩm này để thực hiện bất kỳ sửa đổi nào.

4. Không sử dụng sản phẩm này dưới trời mưa.

5. Nếu bạn không định sử dụng sản phẩm này trong một thời gian dài, vui lòng bảo quản nó ở nơi khô ráo cũng như tránh nhiệt độ quá cao và bụi.

6. Nếu nhìn thấy khói bốc ra từ máy hoặc hiện tượng bất thường khác vui lòng liên hệ với nhà bán lẻ để giải quyết vấn đề ngay lập tức.

7. Không tác động mạnh hay để vật nặng lên loa.

8. Rút phích cắm của sản phẩm trước khi vệ sinh, chỉ sử dụng khăn khô.

Ghi chú!
Để nâng cao hiệu suất của sản phẩm, sản phẩm của chúng tôi được cập nhật liên tục. Nội dung có thể thay đổi mà không báo trước và sách hướng dẫn này chỉ mang tính chất tham khảo, mong bạn thứ lỗi.
Cảm ơn bạn v đã mua hàng.