


尺寸: 95*60mm

正面

User Manual

True Wireless Earphone
Model NO.: K50

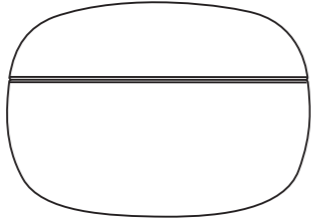


Thank you for purchasing your new K50 true wireless earphone.
We recommend that you spend some time reading this instruction manual in order to fully understand all the operational features it offers. Read all the safety instructions carefully before use and keep this instruction manual for future reference.

Safety Rules

- Charge the earbuds and the charging case at least once every 6 months.
- Do not store the product in extreme temperature (below 0°C or above 45°C)
- Do not use chemicals or detergents to clean the product.
- Do not drop or knock the product on hard surfaces.
- Do not scrape the surface of product with sharp objects.
- Do not try to take the product apart.

Product view

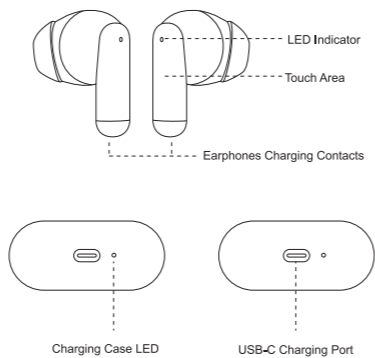

Specification

Bluetooth version	V5.4
BT profiles support	HFP /HSP /A2DP /AVRCP
Bluetooth range	≤10m
Frequency response	2.402GHz - 2.480GHz
Battery capacity	35mAh for each earbud 280mAh for charging case
Charging time	Around 1 hours
Playing time	4 hours
Speaker Driver	13mm

Power ON/OFF

MADE IN CHINA

Power ON

- Open the charging case, take out the earbuds, they will power on automatically.
- Long press left and right earbuds for 3 seconds, the earbuds will power on.

Power OFF

- Put the earbuds into the charging case, the earbuds will power off automatically.
- Long press left and right earbuds for 5 seconds, the earbuds will power off.

Remark: Earbuds power off when they stay out of range for over 5 minutes.

Charging

- Fully charge both the earbuds and the charging case before the first use.
- To prevent damage, use the provided USB-C cable.
- Fully dry off the charging port and the USB port before charging.
- Charging takes around 1.5 hours.

In the Box

Wireless Earbuds
Type-C Charging Cable
User manual
Ear cap

LED Indications

Device	Status	LED indicator
Earbuds (red and blue)	Charging	Red light is always on
	Fully Charged	Lights off
	Pairing mode	Master: blue and red lights flash
Charging Case (green)	Charging	The green light flash
	Fully charged	The green light is always on

Pairing


- When using K50 true wireless earphone, the first time. Take the earbuds. The master earphone indicator will blink blue and red alternately.
- Turn on Bluetooth on your device.
- Search and select "Rezo K50".
- When connected, the indicators light off

Multi Functions

Function	Left earbud	Right earbud
Play/Pause Answer/End a call	Single tap either side	
Next song		Double tap
Previous song	Double tap	
Volume up	Triple tap	
Volume down		Triple tap
Reject a call	Double tap either side	
Active Siri/ Google Assistant	Long press 3 seconds either side	

Warning

- Listening to earbuds at high volume levels, particularly over extended periods of time, may damage your hearing.
- Supervise children when using equipment. This product is not a toy.
- The small parts included with this product can be a choking hazard. This product is not intended for use by small children and should be kept away from children under 3 years of age.




MADE IN CHINA

背面

Hướng dẫn sử dụng

Tai nghe không dây
Model No. : K50

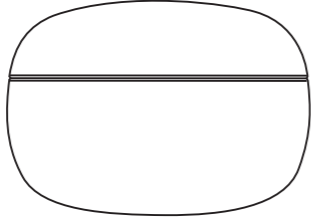


Đọc tất cả hướng dẫn sử dụng an toàn trước khi sử dụng

Quy tắc an toàn

- Sạc tai nghe và hộp sạc ít nhất 6 tháng một lần.
- Không bảo quản sản phẩm ở nhiệt độ quá cao (dưới 0°C hoặc trên 45°C)
- Không sử dụng hóa chất, chất tẩy rửa để vệ sinh sản phẩm.
- Không làm rơi hoặc va đập sản phẩm trên bề mặt cứng.
- Không cạo bề mặt sản phẩm bằng các vật sắc nhọn.
- Không cố tháo rời sản phẩm.

Bên trong hộp

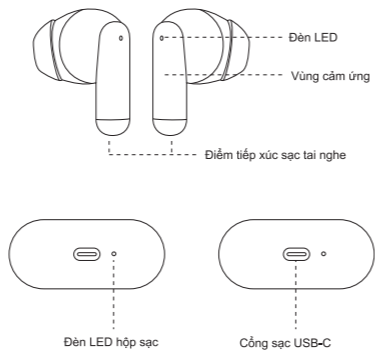

Thông số kỹ thuật

Phiên bản Bluetooth	V5.4
Bluetooth profiles	HFP /HSP /A2DP /AVRCP
Phạm vi Bluetooth	≤10m
Tần số	2.402GHz - 2.480GHz
Dung lượng pin	Tai nghe: 35mAh*2 Hộp sạc: 280mAh
Thời gian sạc	Khoảng 1 giờ
Thời gian sử dụng	Khoảng 4 giờ
Màng loa	13mm

Bật/Tắt nguồn

Bật nguồn

- Mở hộp sạc, lấy 2 tai nghe ra, tai nghe sẽ tự động bật nguồn.
- Nhấn và giữ tai nghe bên trái và bên phải trong 3 giây, tai nghe sẽ bật nguồn.

Tắt nguồn

- Đặt 2 tai nghe vào hộp sạc, tai nghe sẽ tự động tắt nguồn.
- Nhấn và giữ tai nghe bên trái và bên phải trong 5 giây, tai nghe sẽ tắt nguồn.

Lưu ý: Tai nghe sẽ tắt nguồn khi nằm ngoài phạm vi Bluetooth trong hơn 5 phút.

Sạc pin

- Sạc đầy cả tai nghe và hộp sạc trước lần sử dụng đầu tiên.
- Để tránh hư hỏng, hãy sử dụng cáp USB-C đi kèm
- Lau khô hoàn toàn điểm tiếp xúc sạc của tai nghe và cổng sạc của hộp sạc trước khi sạc.
- Quá trình sạc mất khoảng 1 giờ.

Bên trong hộp

Tai nghe không dây
Cáp sạc Type-C
Hướng dẫn sử dụng
Đệm tai thay thế

Trạng thái đèn LED

Thiết bị	Trạng thái	Đèn báo
Tai nghe (Đèn đỏ và xanh)	Đang sạc	Đèn đỏ sáng ổn định
	Sạc đầy	Đèn tắt
	Ghép nối	Tai chính: Đèn xanh và đỏ sáng nhấp nháy
	Kết nối thành công	Đèn tắt
Hộp sạc (Đèn xanh)	Đang sạc	Đèn xanh sáng nhấp nháy
	Sạc đầy	Đèn xanh sáng ổn

Kết nối


- Khi lần đầu sử dụng tai nghe TWS K50. Lấy 2 tai nghe ra khỏi hộp sạc, đèn báo của tai nghe chính sẽ nhấp nháy màu xanh và đỏ.
- Bật Bluetooth trên thiết bị của bạn.
- Tìm kiếm và chọn "Rezo K50".
- Khi được kết nối thành công, đèn báo trên tai nghe sẽ tắt.

Đa chức năng

Chức năng	Tai nghe bên trái	Tai nghe bên phải
Choi/dừng nhạc	Chạm 1 lần	
Trả lời/Kết thúc cuộc gọi		Chạm 2 lần
Bài hát tiếp theo		Chạm 2 lần
Bài hát trước đó	Chạm 2 lần	
Tăng âm lượng	Chạm 3 lần	
Giảm âm lượng		Chạm 3 lần
Từ chối cuộc gọi	Chạm 2 lần	
Trợ lý ảo	Chạm và giữ 3 giây	

Cảnh báo

- Không nên nghe tai nghe ở mức âm lượng lớn trong thời gian dài, vì có thể làm hỏng thính giác của bạn.
- Giám sát trẻ em khi sử dụng thiết bị. Các bộ phận nhỏ đi kèm với sản phẩm này có thể gây nguy cơ nghẹt thở. Sản phẩm này không dành cho trẻ nhỏ sử dụng và để xa tầm tay trẻ em dưới 3 tuổi.



MADE IN CHINA