


尺寸: 60mm*90mm


BLUETOOTH SPEAKER Rezo Light E21

User Manual

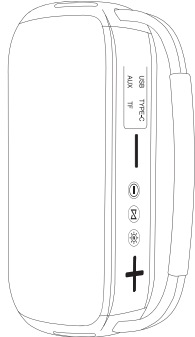


Thank you for purchasing Bluetooth Speaker Rezo Pulse E21.
Please carefully read user guide in properly and keep this for further reference.

Packing list



1 pc speaker
1 pc user manual
1 pc Type C charging cable

Key function directio

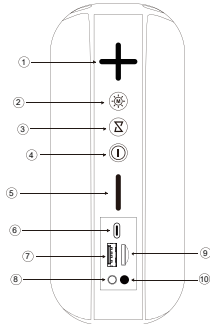

Key function direction

- Short press to volume up, long press to change into next song
- Short press for light changing
- TWS/mode switch: click for function switch (Bluetooth/USB/AUX), double click for TWS connection
- Power/play switch: long press to turn on/off, short press: play / pause; when calling, press one time for answer the phone, double click for reject the calling (only phone)
- Short press to volume down, long press to change into the previous song
- TYPE C charging Port. If there is a warning sound when playing, it is power low, please charge the speaker. (Charging voltage: 5V, charging currency 0.3A, Maximum 5V 1A). When speaker charging, the red light is on. Lights will be off when it's fully charged
- USB card port, support MAX 64G flash, compatible with WAV/MP3 files
- AUX Port: outside audio input
- TF card port, support MAX 64G flash, compatible with WAV/MP3
- LED indication: The speaker is not connected to bluetooth, the light flashes quickly. When bluetooth is connected, the light turns blue. When playing music, the blue light flashes

Bluetooth Connection

- Start the speaker, there is a prompt tone, Bluetooth enters the pairing mode.
- Turn on the mobile phone, turn on Bluetooth, search for the Bluetooth code name "Rezo Pulse E21" and click; after a few seconds, you will hear the prompt tone of successful pairing and connection, the mobile phone displays connected.
- In subsequent use, as long as the device's bluetooth is turned on, it can be automatically connected.

TWS function

While at the same time open two devices and do not connect in the bluetooth mode, double click TWS/mode button of either of the speaker and then, you will hear the prompt tone of successful pairing and connection. You search for the Bluetooth and click to use this function.

Radio function

Turn on the speaker, press the power button to select Radio mode. Please plug in a charging cable and press Power button to search and save channel automatically for your first use. After save completely, long press "+" and "-" to select previous and next channel.

Attentions

- Do not use abrasive cleaners to clean this product.
- Do not allow this product to be heated, close to fire source or direct sunlight for a long time. It will easy to burn and damage the electronic components.
- Do not attempt to disassemble this product to make any modifications.
- Do not use this product in the rain.
- If you do not plan to use this product for a long time, please store it in a dry environment and charge the speaker at least once a month to prolong its life and avoid extreme temperatures and dust.
- If you saw smoke coming out of the machine or other improper phenomenon, please contact the retailer to solve the issue immediately.
- Do not throw the machine.

Note!


In order to improve product performance, our products are constantly updated. It is no additional notice about technical issues and this manual is for reference only, please forgive.

Thank you for your purchase.

尺寸: 60mm*90mm


LOA BLUETOOTH Rezo Light E21

Hướng dẫn sử dụng

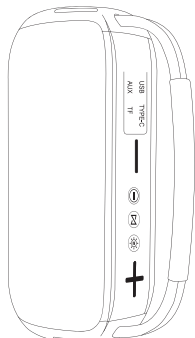


Cảm ơn bạn đã lựa chọn Loa Bluetooth Rezo Pulse E21.
Vui lòng đọc kỹ hướng dẫn để sử dụng đúng cách và giữ lại để tham khảo thêm.

Bộ sản phẩm gồm



1 loa bluetooth
1 hướng dẫn sử dụng
1 dây sạc loa Type C

Chức năng các phím

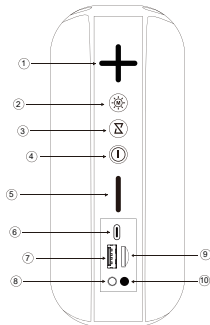

Chức năng các phím

- Nhấn nhanh để tăng âm lượng, nhấn giữ để chuyển sang bài hát tiếp theo
- Nhấn nhanh để thay đổi màu đèn
- Công tắc TWS/chế độ: nhấn để chuyển đổi chức năng (Bluetooth/USB/AUX), nhấn đúp để kết nối TWS
- Công tắc nguồn/phát: nhấn giữ để bật/tắt, nhấn nhanh: phát/tạm dừng; khi gọi, nhấn một lần để trả lời điện thoại, nhấn đúp để từ chối cuộc gọi (chỉ trên điện thoại)
- Nhấn nhanh để giảm âm lượng, nhấn giữ để chuyển sang bài hát trước
- Cổng sạc TYPE C. Nếu có âm thanh cảnh báo khi phát, nguồn pin đang yếu, vui lòng sạc loa. (Điện áp sạc: 5V, dòng điện 0.3A, Tối đa 5V 1A). Khi loa sạc, đèn đỏ sẽ sáng. Đèn sẽ tắt khi sạc đầy
- Cổng thẻ USB, hỗ trợ đèn flash MAX 64G, tương thích với các tệp WAV/MP3
- Cổng AUX: đầu vào âm thanh bên ngoài
- Cổng thẻ TF, hỗ trợ MAX 64G flash, Tương thích với WAV/MP3
- Đèn LED chỉ báo: Loa không được kết nối với bluetooth, đèn sẽ nhấp nháy nhanh. Khi bluetooth được kết nối, đèn sẽ chuyển sang màu xanh lam. Khi phát nhạc, đèn xanh lam sáng

Kết nối Bluetooth

- Khởi động loa, có âm báo nhắc, Bluetooth chuyển sang chế độ chờ ghép nối.
- Bật điện thoại di động, bật Bluetooth, tìm kiếm tên Bluetooth "Rezo Pulse E21" và nhấp vào; sau vài giây, bạn sẽ nghe thấy âm báo nhắc ghép nối và kết nối thành công, điện thoại di động hiển thị được kết nối.
- Trong lần sử dụng tiếp theo, Loa có thể tự động kết nối khi Bluetooth của thiết bị mà được kết nối gần nhất đang mở.

Chức năng TWS

Trong khi cùng lúc mở hai thiết bị và không kết nối ở chế độ bluetooth, hãy nhấp đúp vào nút TWS/mode của bất kỳ loa nào và sau đó, bạn sẽ nghe thấy âm báo ghép nối và kết nối thành công. Bạn tìm kiếm Bluetooth và nhấp để sử dụng chức năng này.

Chức năng radio:

Bật loa, nhấn nút nguồn để chọn chế độ Radio. Vui lòng cắm cáp sạc và nhấn nút Nguồn để tự động tìm kiếm và lưu kênh cho lần sử dụng đầu tiên của bạn. Sau khi lưu hoàn toàn, nhấn và giữ "+" và "-" để chọn kênh trước và tiếp theo.

Chú ý

- Không sử dụng chất tẩy rửa mài mòn để làm sạch sản phẩm.
- Không để Loa bị làm nóng, gần nguồn lửa hoặc tiếp xúc trực tiếp với ánh nắng mặt trời trong thời gian dài, nó sẽ dễ làm cháy và hỏng các linh kiện điện tử.
- Không cố gắng tháo rời sản phẩm này để thực hiện bất kỳ sửa chữa nào.
- Không sử dụng sản phẩm này dưới trời mưa.
- Nếu bạn không định sử dụng sản phẩm này trong một thời gian dài, vui lòng bảo quản nó ở nơi khô ráo và sạc loa ít nhất mỗi tháng một lần để kéo dài tuổi thọ của loa cũng như tránh nhiệt độ quá cao và bụi.
- Nếu nhìn thấy khói bốc ra từ máy hoặc hiện tượng bất thường khác với lòng liên hệ với nhà bán lẻ để giải quyết vấn đề ngay lập tức.
- Không tác động mạnh hay để vật nặng lên loa.

Ghi chú!

Để nâng cao hiệu suất của sản phẩm, sản phẩm của chúng tôi được cập nhật liên tục. Nội dung có thể thay đổi mà không báo trước và sách hướng dẫn này chỉ mang tính chất tham khảo, mong bạn thứ lỗi.

Cảm ơn bạn vì đã mua hàng.