

尺寸：95x130mm
铜版纸正反印刷 折页

BLUETOOTH SPEAKER
REZO KILLBURN 1



User Manual


Thank you for purchasing Bluetooth Speaker Rezo Killburn 1.
Please carefully read user guide in properly and keep this for further reference.

Package Content

Speaker*1
Type C Charging Cable*1
3.5mm Audio Cable*1
User Manual*1

Package Content

- 1.Power button
- 2.Mode button
- 3.Light button
- 4.PREVIOUS/VOL-
- 5.Play/Pause button
- 6.NEXT/VOL+
- 7.Charging indicator light
- 8.Type-C charging port
- 9.AUX in
- 10.TF card port

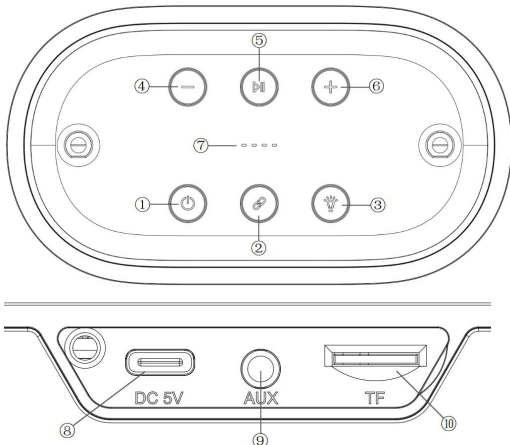

Power On/Connection

Power button 
On: Press and hold for 2S
Blue indicator is breathing blue indicator blinks quickly
Off: Press and hold for 2S
Turn on Bluetooth on your device Select "Rezo Killburn 1"and connect it

Play/Pause button

Press and hold for 2S to disconnect or reconnect

Note

The speaker will be automatically connected to the last paired device as soon as you turn it on.


TWS Dual Devices Connection

- Turn on two speakers and not connect to your device.
 - Press mode button twice of any one speaker and there are 2 voice prompts. After 2nd. prompt, both speakers are paired each other.The main speaker button indicator light is flash, and the another speaker button indicator light is on.
 - Turn on Bluetooth of your device and select "Rezo Killburn 1" to connect.
- Now your device is connected to two speakers.

* Press mode button twice can disconnect two speakers connection.

Function

Power on/off	Power button 	Press and hold for 2S
Clear Bluetooth pairing	Mode button 	Press and hold for 5S
TWS pairing/disconnect		Press twice
Mode Switch		Press once
Play/Pause	Mode button 	Press once
Bluetooth disconnect/reconnect		Press and hold for 2S
Previous song	PREVIOUS/VOL-	Press and hold for 2S
Volume down		Press once


Next song	NEXT/VOL+ 	Press and hold for 2S
Volume up		Press once
Reset and power off	 and 	Hold down + and - for 2 seconds at the same time
RGB light switch	Light button 	Press once
RGB light off/on		Press and hold for 2S

Mode Switch

Insert TF/SD cards or audio cable to the speaker then you can press "  " to switch different mode by turn.


TF/SD card mode

Insert a card to the speaker and it can play music automatically.

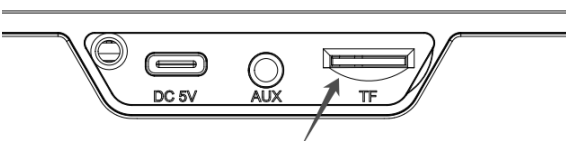


Connect the speaker to a music player/mobile via 3.5mm audio cable (provide as accessory) and the music can be played automatically.

* Pressing speaker button to change songs is not available when it is in Aux in mode.

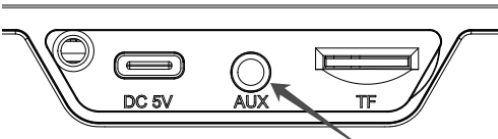

Charging

Charge the speaker with type C charging cable , preferably from any PC or laptop as compared to a USB charger.

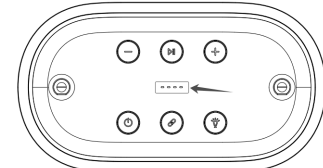

Indicator on speaker

Charging: Last white charging indicator is flash.
Charging: running water light status flashing
Full charged:Four white charging indicator is off.
Fully charged: All four white charging indicators are on

Safety Tips

- 1.Please follow the instruction to operate the product.
- 2.Please charge the product with input power below DC 5V/2.4A to protect the battery
- 3.Do not immerse this product in any liquid or or splash any liquid on this product
- 4.Please store or use the product in a normal temperature environment.
- 5.Please keep the product from heat source, such as radiators, hot air regulators, stoves, or other heat generating instruments as it is not anti-high temperature.
- 6.Do not jam the ports of the product, such as charger port, LED port and TF card port
- 7.In order to protect your hearing and extend the product lifetime, it is not recommended to adjust the volume to the maximum level for a long time.

Batteries:

A warning that batteries (battery pack or batteries installed) shall not be exposed to excessive heat such as sunshine, fire or the light.

- 1.Replacement of a battery with an incorrect type that can defeat a safeguard.
- 2.Disposal of a battery into fire or a hot oven, or mechanically crushing or cutting of a battery, that can result in an explosion.
- 3.Leaving a battery in an extremely high temperature surrounding environment that can result in an explosion or the leakage of flammable liquid or gas.
- 4.A battery subjected to extremely low air pressure that may result in an explosion or the leakage of flammable liquid or gas.

LOA REZO BLUETOOTH
REZO KILLBURN 1



Hướng dẫn sử dụng


Cảm ơn bạn đã lựa chọn Loa Bluetooth Rezo Killburn 1. Vui lòng đọc kỹ hướng dẫn để sử dụng đúng cách và giữ lại để tham khảo thêm.

Bộ sản phẩm gồm:

- 1 Loa Rezo bluetooth Killburn 1
- 1 Dây cáp sạc type C
- 1 Sách hướng dẫn sử dụng

Cấu tạo sản phẩm:

1. Nút nguồn
2. Nút chế độ
3. Nút đèn
4. Bài trước / giảm âm lượng
5. Nút phát/tạm dừng
6. Bài sau / tăng âm lượng
7. Đèn báo sạc
8. Cổng sạc Type-C
9. Cổng AUX in
- 10.Cổng thẻ TF

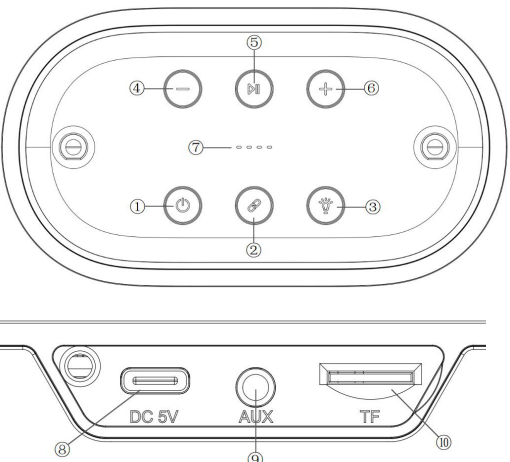

Bật nguồn/Kết nối

Nút nguồn

Bật: Nhấn và giữ 2 giây
Đèn xanh nhấp nháy chậm Đèn xanh nhấp nháy nhanh
Tắt: Nhấn và giữ 2 giây

Bật Bluetooth trên thiết bị của bạn Chọn "Rezo Killburn 1" và kết nối

Nút phát/tạm dừng

Nhấn và giữ 2 giây để ngắt hoặc kết nối lại

Lưu ý

Loa sẽ tự động kết nối với thiết bị đã ghép nối lần trước khi bật nguồn.

Kết nối hai loa (TWS)

- Bật hai loa nhưng KHÔNG kết nối với thiết bị của bạn.
- Nhấn nút chế độ hai lần trên một trong hai loa, sẽ có hai tiếng hiệu phát ra. Sau tiếng hiệu thứ hai, hai loa sẽ tự động ghép nối với nhau. Loa chính có đèn nhấp nháy, loa phụ có đèn sáng liên tục.

- Bật Bluetooth trên thiết bị của bạn và chọn "Rezo Killburn 1" để kết nối.
- Thiết bị của bạn đã được kết nối với hai loa.

* Nhấn nút chế độ hai lần để ngắt kết nối giữa hai loa.


Chức năng

Nút Bật/Tắt	Power button 	Nhấn và giữ 2 giây
Xóa ghép nối Bluetooth	Mode button 	Nhấn và giữ 5 giây
Ghép nối/ ngắt kết nối TWS		Nhấn hai lần
Chuyển chế độ		Nhấn một lần
Phát/Tạm dừng	play/pause button 	Nhấn một lần
Ngắt kết nối/kết nối lại Bluetooth	button 	Nhấn và giữ 2 giây

Bài hát tr ước	PREVIOUS/VOL- 	Nhấn và gi ữ 2 giây
Giảm âm l ượng		Nhấn một lần
Bài hát ti ếp theo	NEXT/VOL+ 	Nhấn và gi ữ 2 giây
Tăng âm l ượng		Nhấn một lần
Đặt lại và tắt ngu ồn	 and 	Giữ + và - trong 2 giây cùng lúc
Cổng t ắc đèn RGB	Light button 	Nhấn một lần
Đèn RGB b ật/tắt		Nhấn và gi ữ 2 giây

Chuyển chế độ
Cắm thẻ TF/SD hoặc cáp âm thanh vào loa, sau đó có thể nhấn nút chế độ để chuyển giữa các chế độ.


Chế độ thẻ TF/SD
Cắm thẻ vào loa, nhạc sẽ phát tự động.

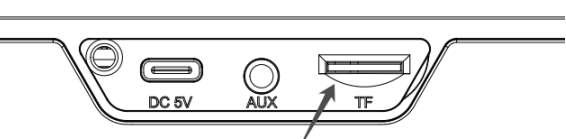

Chế độ AUX in


Kết nối loa với thiết bị phát nhạc hoặc điện thoại bằng cáp âm thanh 3.5mm (đủ ợc cung cấp kèm), nhạc sẽ phát tự động.

* Pressing speaker button to change songs is not available when it is in Ch ế độ AUX in.

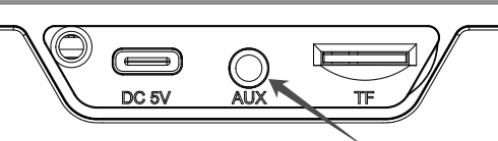

Sạc

Sạc loa bằng cáp sạc Type-C, nên sạc từ máy tính hoặc laptop thay vì sạc từ bộ sạc USB.

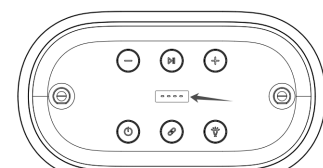

Đèn báo trên loa

Sạc: Đèn báo sạc màu trắng cuối cùng nhấp nháy.

Sạc đầy: Bốn đèn trắng đều sáng khi đã sạc xong.

Lưu ý an toàn

- 1.Vui lòng làm theo hướng dẫn để sử dụng sản phẩm.
- 2.Vui lòng sạc với nguồn điện dưới DC 5V/2.4A để bảo vệ pin.
- 3.Không nhúng hoặc làm ướt sản phẩm bằng bất kỳ chất lỏng nào.
- 4.Bảo quản và sử dụng sản phẩm trong môi trường nhiệt độ bình thường.
- 5.Tránh để sản phẩm gần nguồn nhiệt như lò sưởi, bếp hoặc các thiết bị tỏa nhiệt.
6. Không làm kẹt các cổng của sản phẩm, chẳng hạn như cổng sạc, cổng LED và cổng thẻ TF
7. Để bảo vệ thính giác của bạn và kéo dài tuổi thọ của sản phẩm, không nên điều chỉnh âm lượng ở mức tối đa trong thời gian dài.

Pin:

Cảnh báo: Pin không được tiếp xúc với nhiệt độ cao như ánh nắng mặt trời, lửa hoặc ánh sáng mạnh.

1. Thay pin sai loại có thể vô hiệu hóa cơ chế an toàn.
2. Vứt pin vào lửa, lò nung hoặc cắt, nghiền pin có thể gây nổ.
3. Để pin trong môi trường có nhiệt độ quá cao có thể gây nổ hoặc rò rỉ chất lỏng/gas dễ cháy.
4. Pin trong điều kiện áp suất không khí quá thấp có thể gây nổ hoặc rò rỉ chất lỏng/gas dễ cháy.