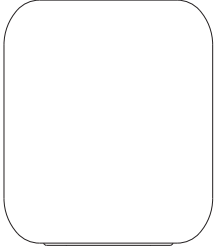

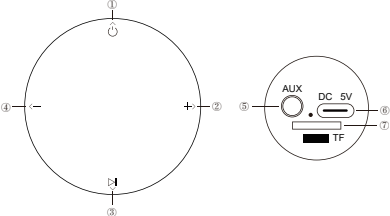
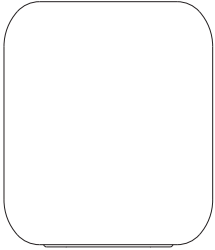

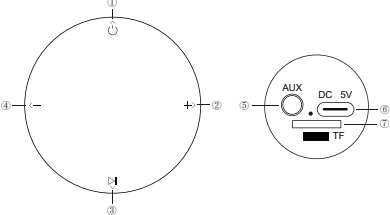


尺寸: 60mm*90mm

BLUETOOTH SPEAKER Rezo TouchBass 1 User Manual  Thank you for purchasing Bluetooth Speaker Rezo TouchBass 1. Please carefully read user guide in properly and keep this for further reference.	Packing list  1 pc speaker 1 pc user manual 1 pc Type C charging cable Key function direction 	Key function direction 1. Power/Mode switch: long touch to turn on/off,Click to switch mode, click twice to switch lights 2.Long touch to volume up, Click to change into next song. 3. Play/TWS:Click to Play/Pause.long touch to enter/exit TWS 4. Long touch to volume down,Click to change into the previous song. 5. AUX Port: outside audio input 6. TYPE C charging Port. There is a warning sound when playing, it is power low, please charge the speaker. (Charging voltage: 5V, charging currency 0.3A,Maximum 5V 1A)When speaker charging, the red light is on. Lights will be off when it's fully charged 7. TF card port, support MAX 64G flash, Compatible with MP3 in high fidelity music files. Bluetooth Connection 1. Start the speaker or Press the mode key to switch to Bluetooth mode , there is a prompt tone, Bluetooth enters the pairing mode. 2.Turn on the mobile phone, turn on Bluetooth, search for the Bluetooth code name "Rezo TouchBass 1" and click; after a few seconds, you will hear the prompt tone of successful pairing and connection, the mobile phone displays connected. 3. In subsequent use, as long as the device's bluetooth is turned on, it can be automatically connected.	TWS function While at the same time open two devices,long touch PLAY button of the speaker and then, you will hear the prompt tone of successful pairing and connection. Attentions 1. Do not use abrasive cleaners to clean this product. 2. Do not allow this product to be heated, close to fire source or direct sunlight for a long time. It will easy to burn and damage the electronic components. 3. Do not attempt to disassemble this product to make any modifications. 4. Do not use this product in the rain. 5. If you do not plan to use this product for a long time, please store it in a dry environment and charge the speaker at least once a month to prolong its life and avoid extreme temperatures and dust. 6. If you saw smoke coming out of the machine or other improper phenomenon , please contact the retailer to solve the issue immediately. 7. Do not throw the machine. Note! In order to improve product performance, our products are constantly updated. It is no additional notice about technical issues and this manual is for reference only, please forgive. Thank you for your purchase.
--	--	--	---

尺寸: 60mm*90mm

LOA BLUETOOTH Rezo TouchBass 1 Hướng dẫn sử dụng  Cảm ơn bạn đã lựa chọn Loa Bluetooth Rezo TouchBass 1 . Vui lòng đọc kỹ hướng dẫn để sử dụng đúng cách và giữ lại để tham khảo thêm.	Bộ sản phẩm gồm  1 loa bluetooth 1 hướng dẫn sử dụng 1 dây sạc loa Type C Chức năng các phím 	Chức năng các phím 1. Công tắc nguồn/chế độ: Chạm và giữ: Bật / Tắt thiết bị Nhấn một lần: Chuyển đổi giữa các chế độ hoạt động (Bluetooth, AUX, TF card...) Nhấn hai lần liên tiếp: Chuyển chế độ ánh sáng 2. Tăng âm lượng / Chuyển bài tiếp theo Chạm và giữ nút + : Tăng âm lượng Nhấn một lần: Phát bài hát kế tiếp 3. Phát nhạc / Kết nối TWS (Play / TWS) Nhấn một lần: Phát hoặc tạm dừng nhạc Chạm và giữ : Vào hoặc thoát khỏi chế độ TWS (True Wireless Stereo) 4. Giảm âm lượng / Chuyển bài trước đó Chạm và giữ nút - : Giảm âm lượng Nhấn một lần: Quay lại bài hát trước đó 5. Cổng AUX: Kết nối thiết bị âm thanh bên ngoài thông qua jack 3.5mm (AUX IN) 6. Cổng sạc TYPE-C Khi đang phát và pin yếu, thiết bị sẽ phát ra âm thanh cảnh báo. Vui lòng sạc loa khi có cảnh báo pin yếu. Điện áp sạc: 5V Dòng điện sạc bình thường: 0.3A Dòng tối đa: 5V 1A Khi đang sạc: Đèn đỏ sáng Khi sạc đầy: Đèn tắt 7. Khe thẻ nhớ TF (MicroSD) Hỗ trợ dung lượng thẻ tối đa 64GB Tương thích với các tệp nhạc MP3 chất lượng cao (âm thanh trung thực – high fidelity) Kết nối Bluetooth 1. Khởi động loa hoặc nhấn phím chế độ để chuyển sang chế độ Bluetooth, có âm thanh gợi ý, Bluetooth vào chế độ ghép nối. 2.Mở điện thoại, bật Bluetooth, tìm kiếm mã Bluetooth "Rezo TouchBass 1" và nhấp vào; Sau vài giây, bạn sẽ nghe thấy dấu nhắc ghép nối và kết nối thành công và điện thoại của bạn cho biết đã kết nối. 3. Trong việc sử dụng tiếp theo, nó có thể được kết nối tự động miễn là Bluetooth của thiết bị được bật.	Chức năng TWS Nhấn nút "Play" của loa trong khi bắt cá hai thiết bị cùng một lúc và bạn sẽ nghe thấy âm thanh nhắc nhở ghép nối và kết nối thành công. Chú ý 1. Không sử dụng chất tẩy rửa mài mòn để làm sạch sản phẩm. 2. Không để Loa bị làm nóng, gần nguồn lửa hoặc tiếp xúc trực tiếp với ánh nắng mặt trời trong thời gian dài, nó sẽ dễ làm cháy và hỏng các linh kiện điện tử. 3. Không cố gắng tháo rời sản phẩm này để thực hiện bất kỳ sửa đổi nào. 4. Không sử dụng sản phẩm này dưới trời mưa. 5. Nếu bạn không định sử dụng sản phẩm này trong một thời gian dài, vui lòng bảo quản nó ở nơi khô ráo và sạc loa ít nhất mỗi tháng một lần để kéo dài tuổi thọ của loa cũng như tránh nhiệt độ quá cao và bụi. 6. Nếu nhìn thấy khói bốc ra từ máy hoặc hiện tượng bất thường khác với lòng liên hệ với nhà bán lẻ để giải quyết vấn đề ngay lập tức. 7. Không tác động mạnh hay để vật nặng lên loa. Ghi chú! Để nâng cao hiệu suất của sản phẩm, sản phẩm của chúng tôi được cập nhật liên tục. Nội dung có thể thay đổi mà không báo trước và sách hướng dẫn này chỉ mang tính chất tham khảo, mong bạn thứ lỗi. Cảm ơn bạn vì đã mua hàng.
--	--	--	---